


Item	Description
A	Upper Windshield
B	Lower Windshield

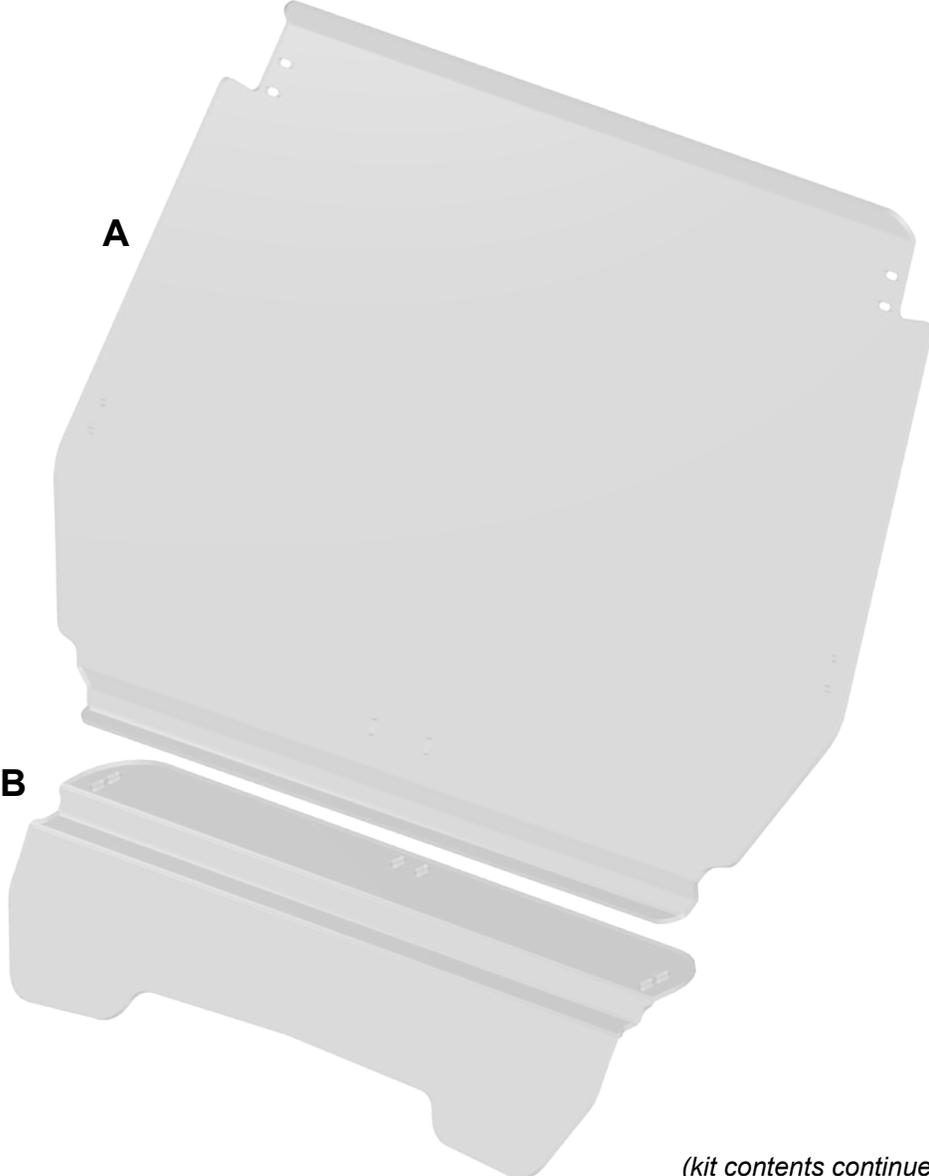

(kit contents continue on following pages)

Read instructions and view illustrations before beginning.

Need help with your installation?

 sales@superatv.com
 www.superatv.com

 1-812-574-7777
  8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

*Thank You
For Choosing*



Liability Statement
SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warranted if item was not installed properly, misused, or modified.

Item	Description	Qty
C	Gas Strut	2
D	Latch Assembly	1
E	Pivot Block	4
F	Clamp	4
G	Upper Support	2
H	Spacer	2
J	Right Bracket	1
K	Left Bracket	1
L	Latch Support	1

(kit contents continued)


Clamps (F) are pre-assembled.
Separate and set aside.




(kit contents continued)

16x  M6-1.0 x 20mm Lg. BHCS

4x  M8-1.25 Nylock Nut

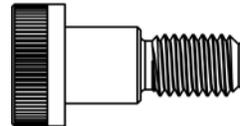2x  M8-1.25 Shoulder Bolt

 2x  M8-1.25 x 14mm Lg. BHCS

8x  M6-1.0 Jam Nut

8x  M6-1.0 Nylock Nut

12x  M6 Sealing Washer

8x  M10-1.50 Nylock Nut

4x  M10-1.50 x 50mm Lg. BHCS


 When assembling, **do not tighten hardware completely.** 

Windshield Cleaning:

- Do not use a dry cloth, or your hands, to wipe off Windshield; Scratching will occur.
 - Do not use window cleaning fluids (Windex, 409, etc) or any solvents (gasoline, denatured alcohol, acetone, etc).
 - Never use abrasive cleaners, abrasive pads, or gritty cloths.
1. Thoroughly rinse Windshield to float off dirt and mud.
 2. Using a soft cloth, or microfiber cloth, clean Windshield with warm water and a gentle detergent. Baby shampoo or hand washing soap are recommended.
 3. To prevent water spots, use a chamois and blot Windshield dry.

Install Seal to Lower Windshield (B) as shown:
seal shown off for clarity only.


To ease installation, soak Seal in hot water before cutting or installing to increase flexibility.

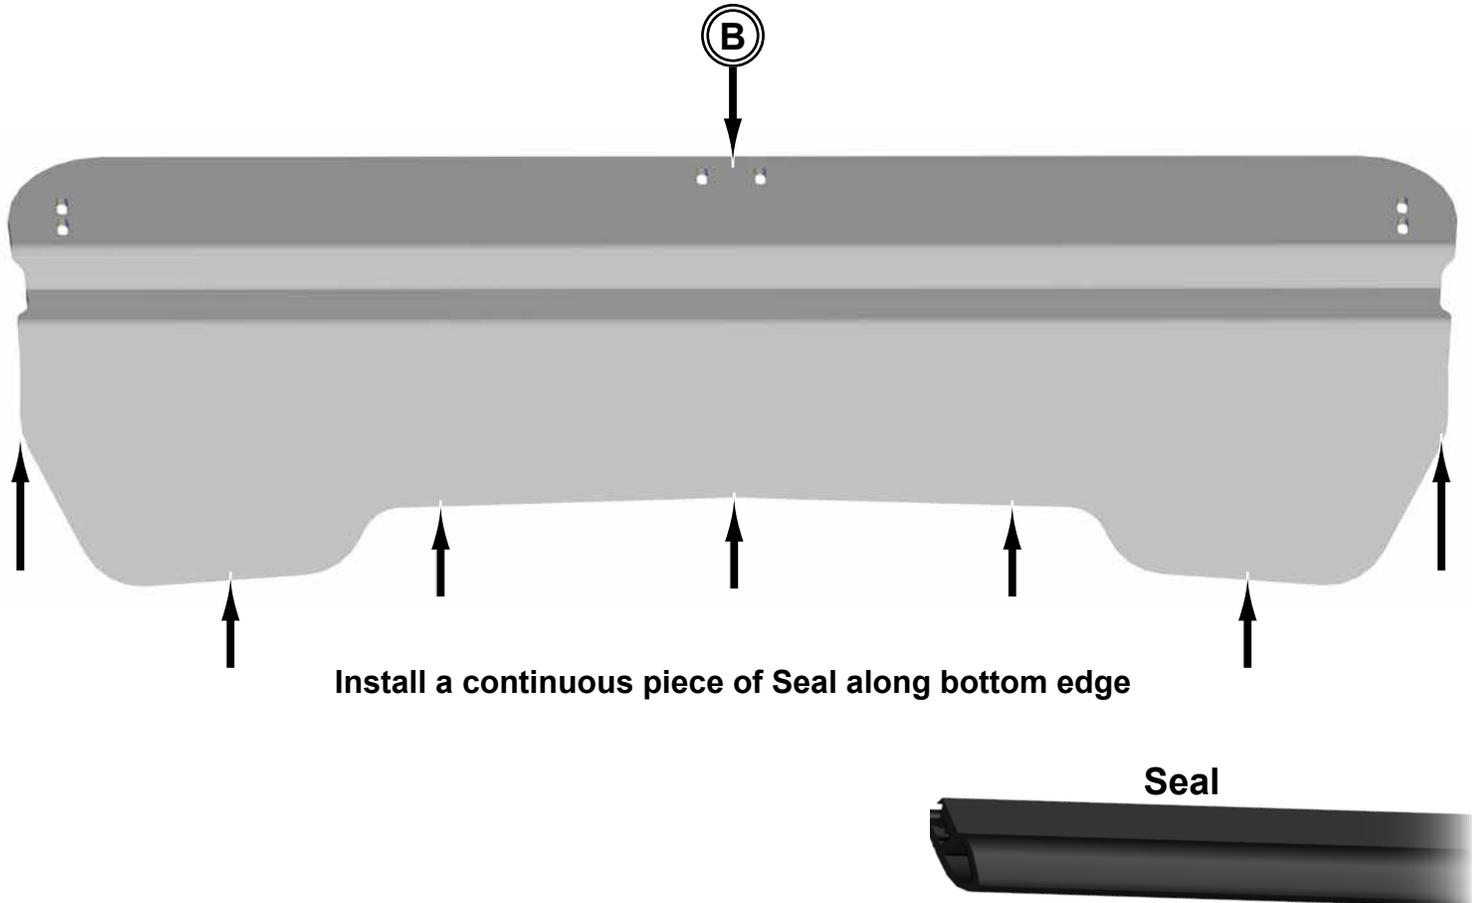


Install a continuous piece of Seal along bottom edge

Seal


- Remove and replace stock hardware from Roll Cage with hardware shown.
- Repeat for opposite side.

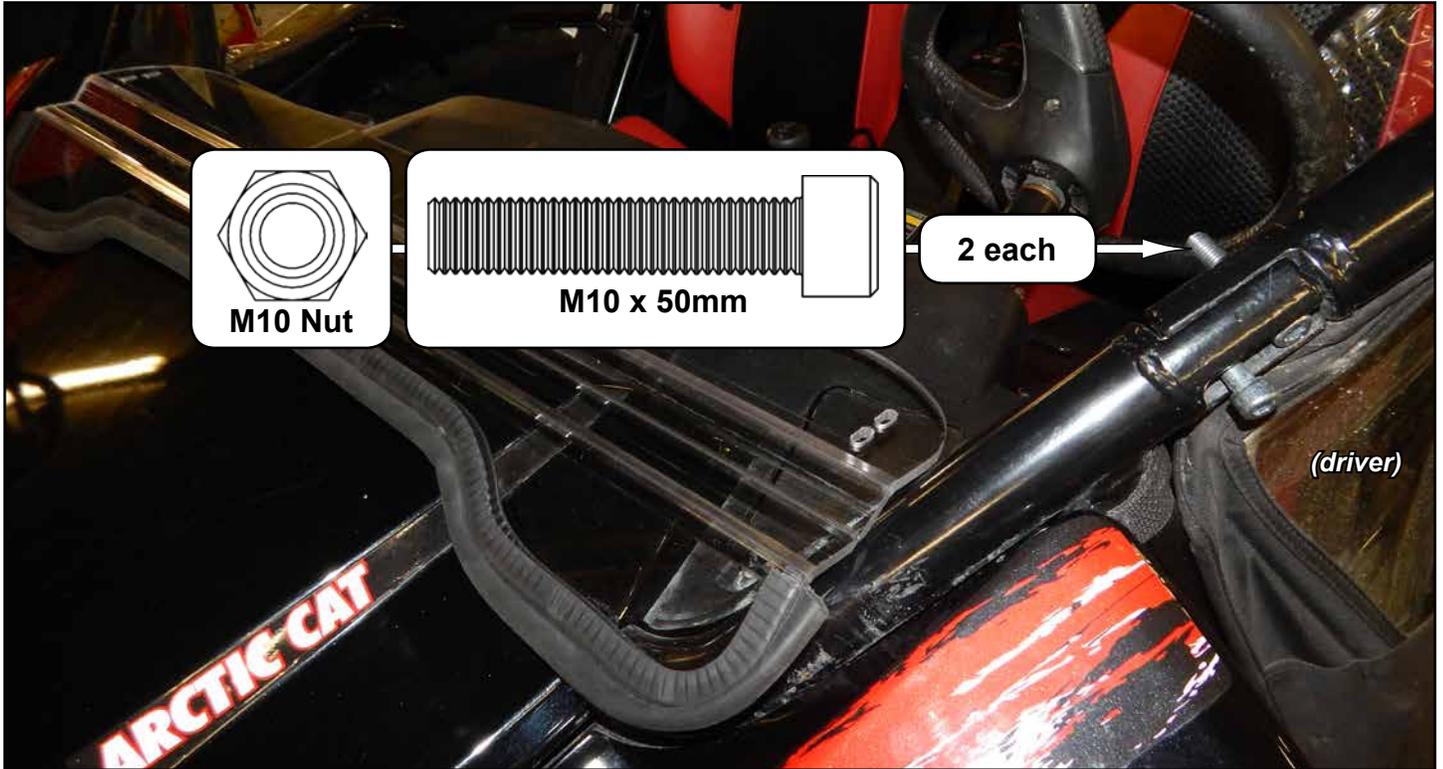

- Install Spacer (H) and Left Bracket (K) onto previously installed hardware.
- Secure with hardware shown.
- Repeat for opposite side.

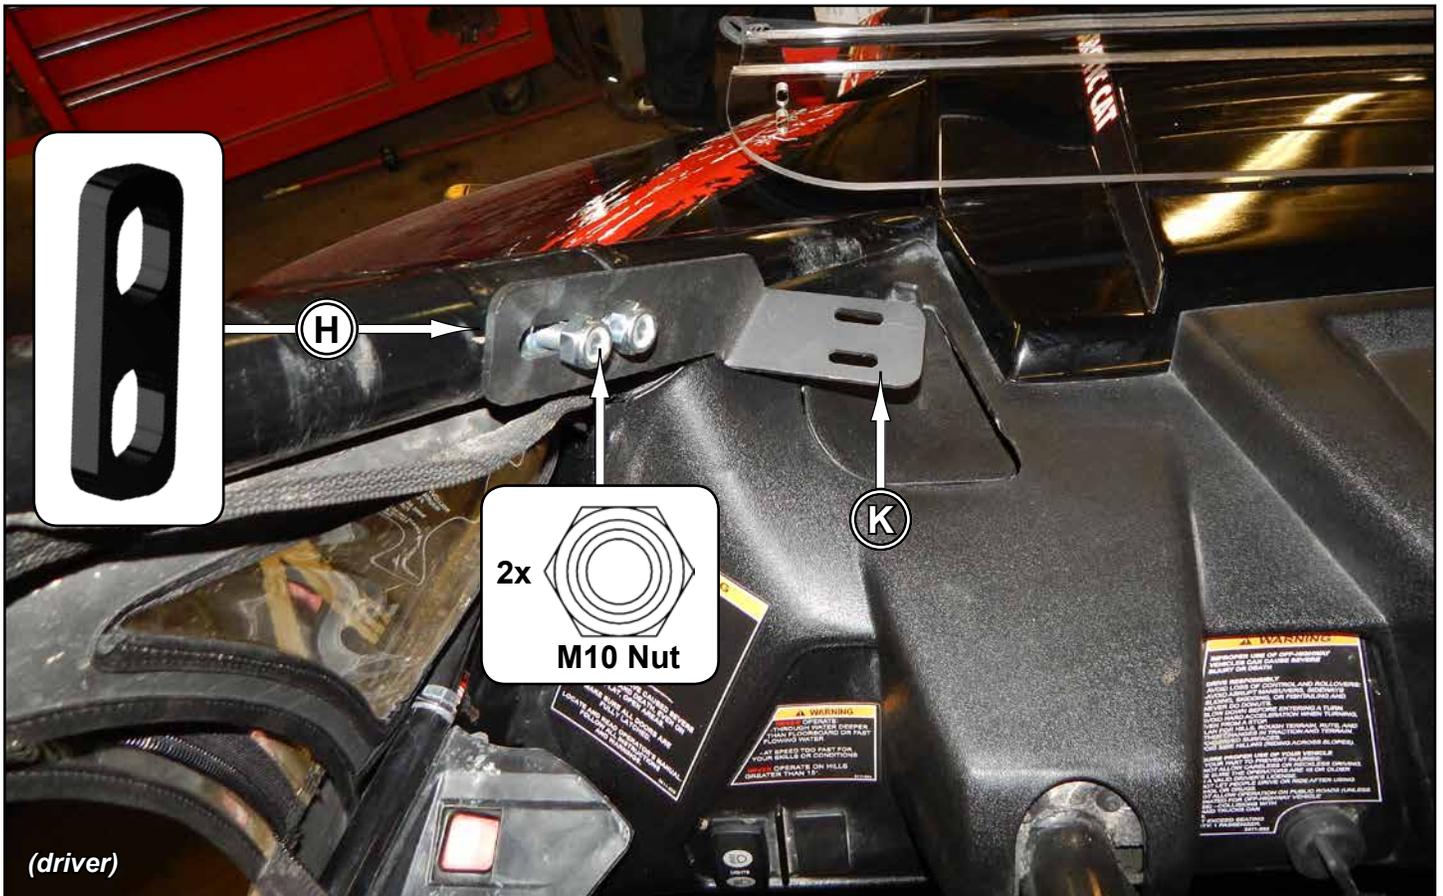


- Secure Lower Windshield (B) to Left and Right Braackets (K)(J) with hardware shown.
- Install Catch (D) and Latch Support (L) to Lower Windshield (B) with hardware shown.

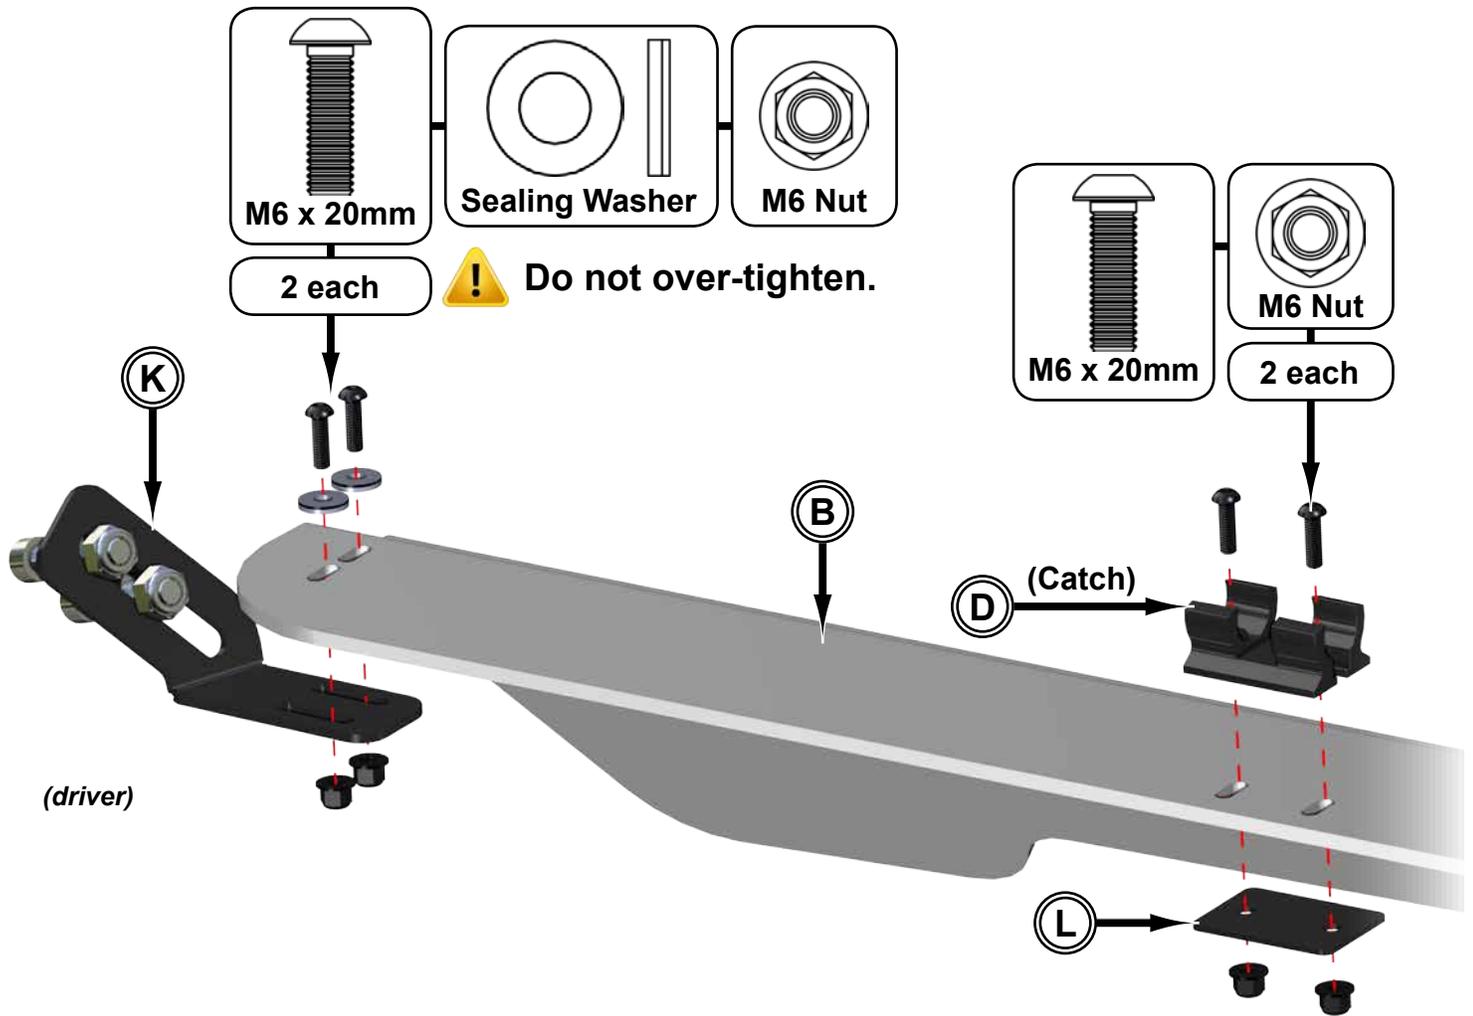


- Install Pivot Blocks (E) to Upper Windshield (A) with hardware shown.
- Install Support (D) and Handle (D) to Upper Windshield (A) with hardware shown.


⚠ Do not over-tighten hardware.

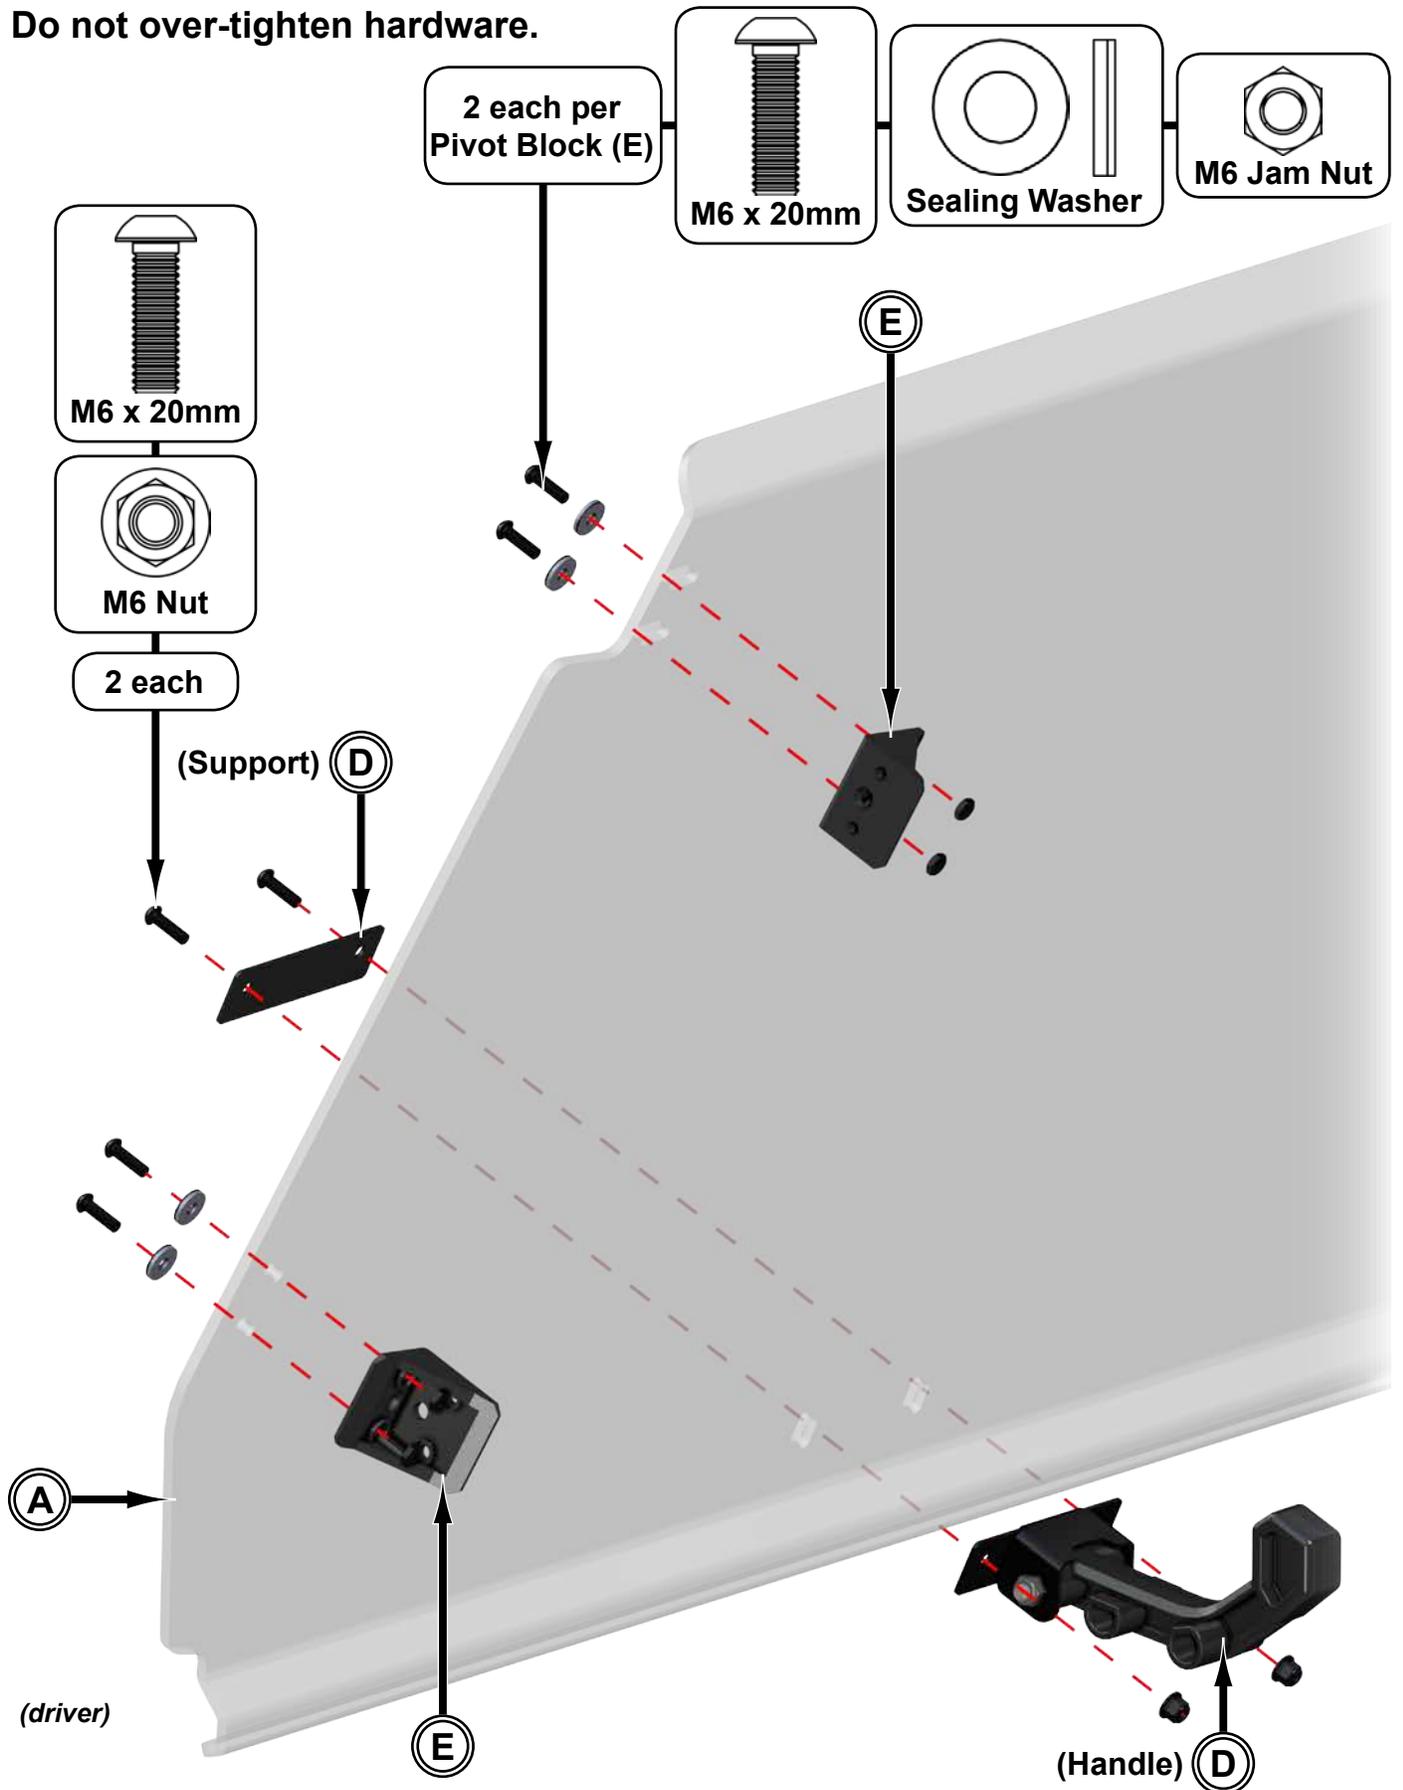

- Install Upper Support (G) to Pivot Block (E) with hardware shown.
- Install Clamp (F) to Upper Support (G) with hardware shown.
- Install Gas Strut (C) through Upper Support (G) and into Clamp (F).
- Repeat for opposite side.

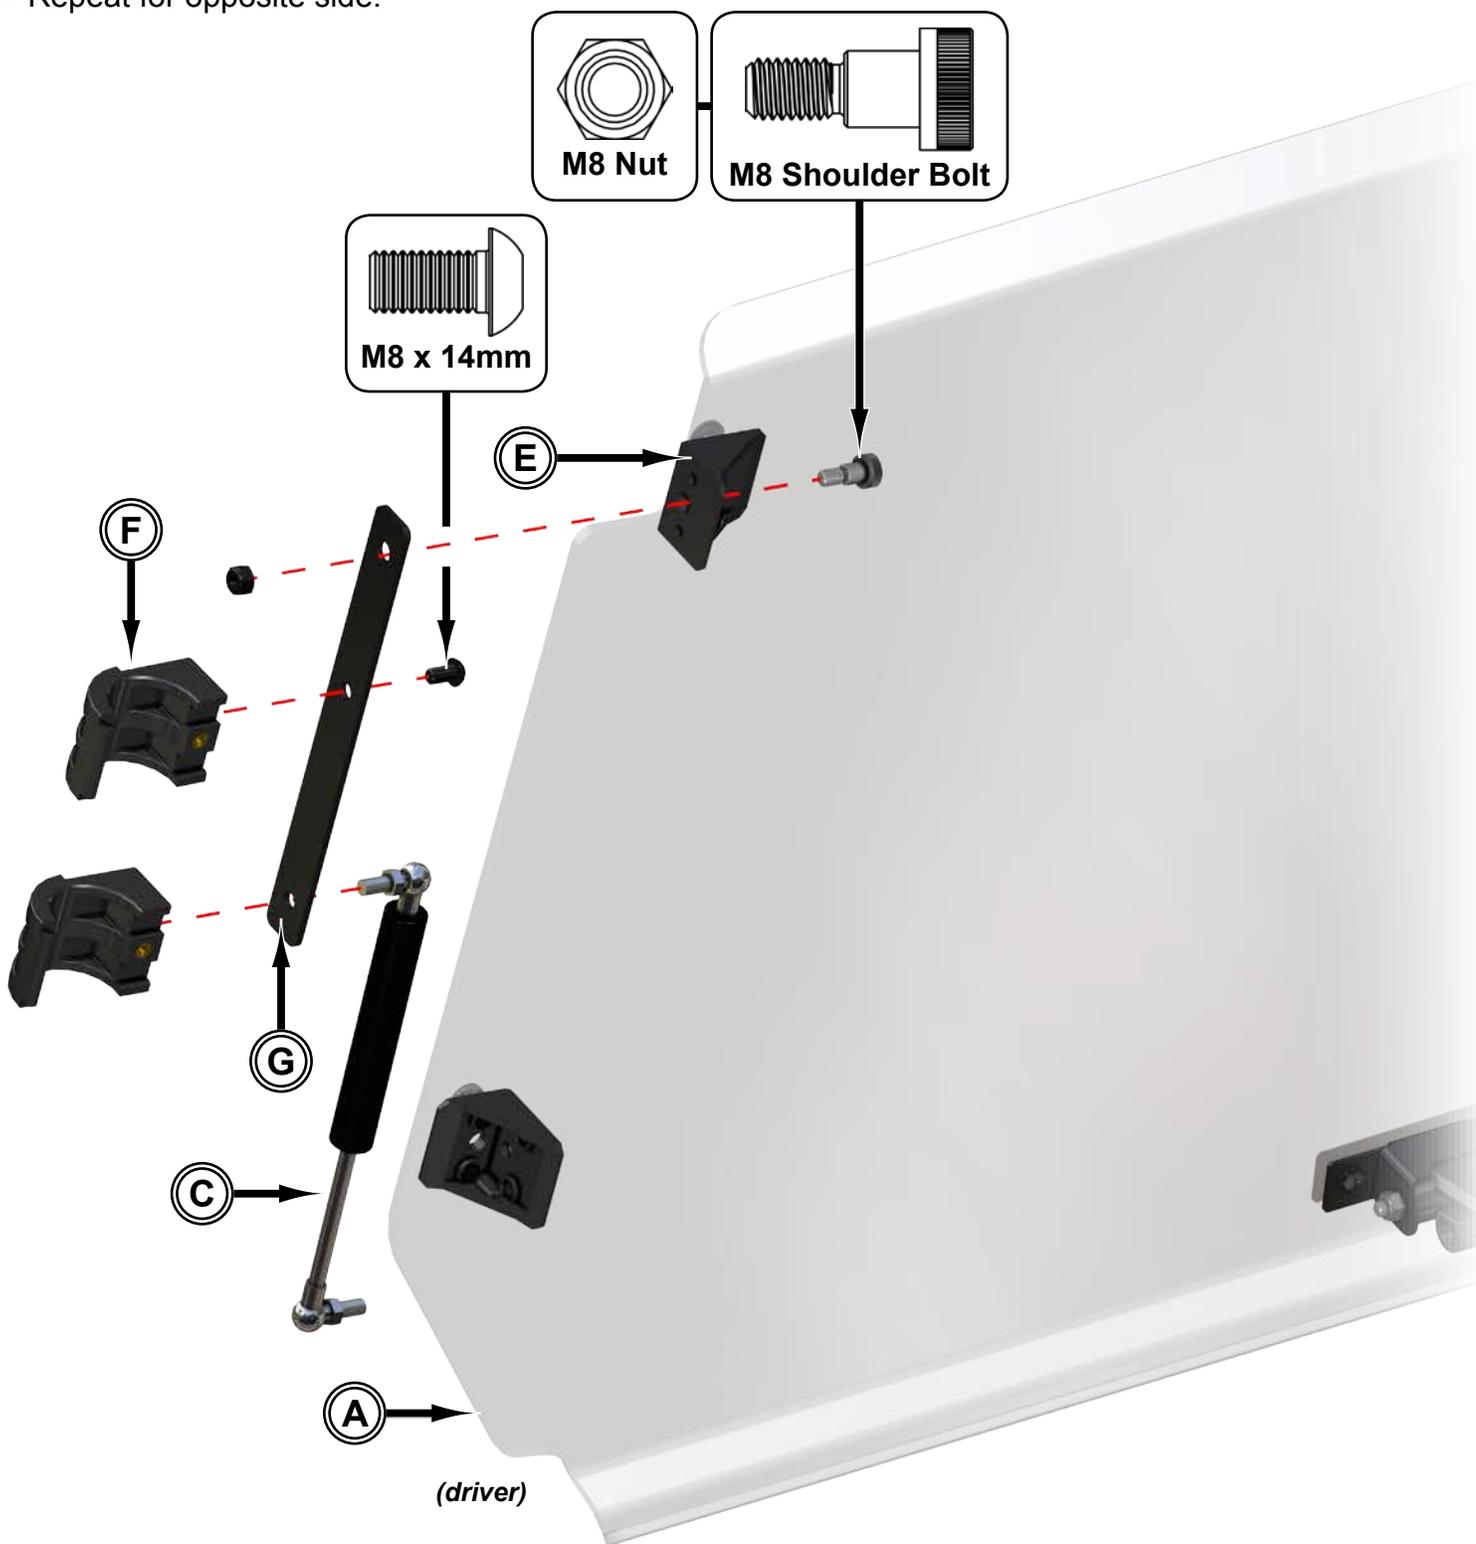

- Install Upper Windshield to machine:
 - Secure with Clamp halves (F) and bolt included with Clamps (F).
 - Repeat steps for opposite side.
- Open Windshield enough to secure Gas Strut (C) to Pivot Block (E) with hardware shown.
- Repeat steps for opposite side.

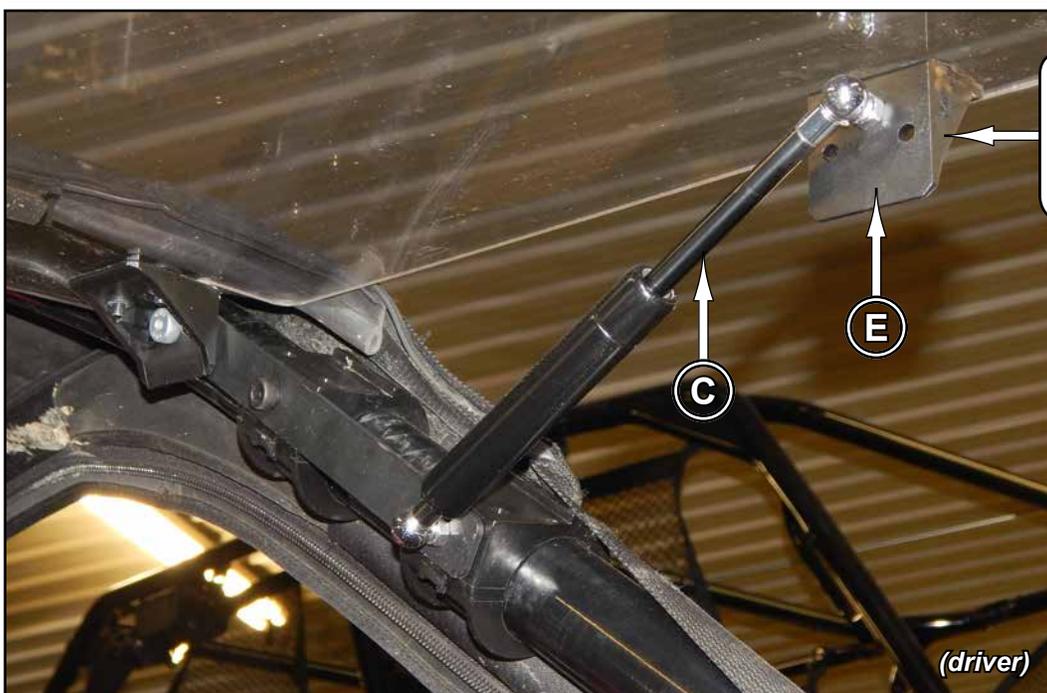

- Align to machine and tighten hardware.

