



Read instructions and view illustrations before beginning.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

*Thank You
For Choosing*

SUPERATV.COM

Liability Statement

SuperATV's products are designed to best fit users ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory, or aftermarket, parts will void any warranty provided by SuperATV and is not recommended. SuperATV's products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV to verify that they will work together.

Although SuperATV has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV products, user agrees that should damages occur, SuperATV will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.





SuperATV will warranty only parts provided by SuperATV. Any damage or problems with OEM housings, bearings, seals, or other manufacturers products will not be covered by SuperATV. SuperATV parts and products are not warranted if item was not installed properly, misused, or modified.

Front Strap Mounting


1. Remove hardware from Roll Cage as shown in Fig. 1.
2. Install Spacer. See Fig. 2.
3. Secure Strap to Roll Cage with provided M10-1.50 x 45mm Lg. SHCS, M10 Washer, and M10-1.50 Nylock Nut. See Figs. 3 - 3a.
 - Install M10-1.50 x 45mm Lg. SHCS and M10-1.50 Nylock Nut into lower hole. See Figs. 3 - 3a.
4. Repeat steps for opposite side.

Rear Strap Mounting

1. Secure Strap to Roll Cage, as shown Figs. 4 - 4a, with provided hardware.
2. Repeat steps for opposite side.

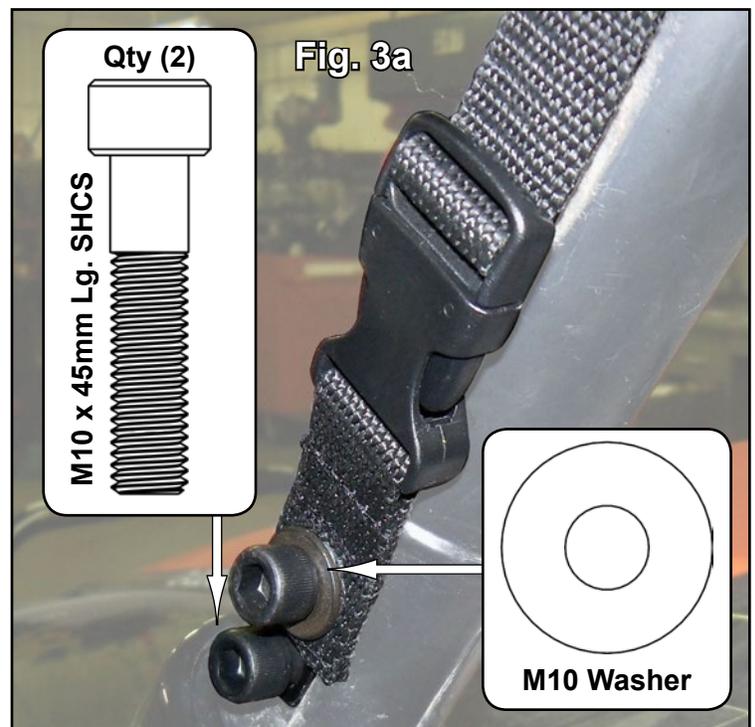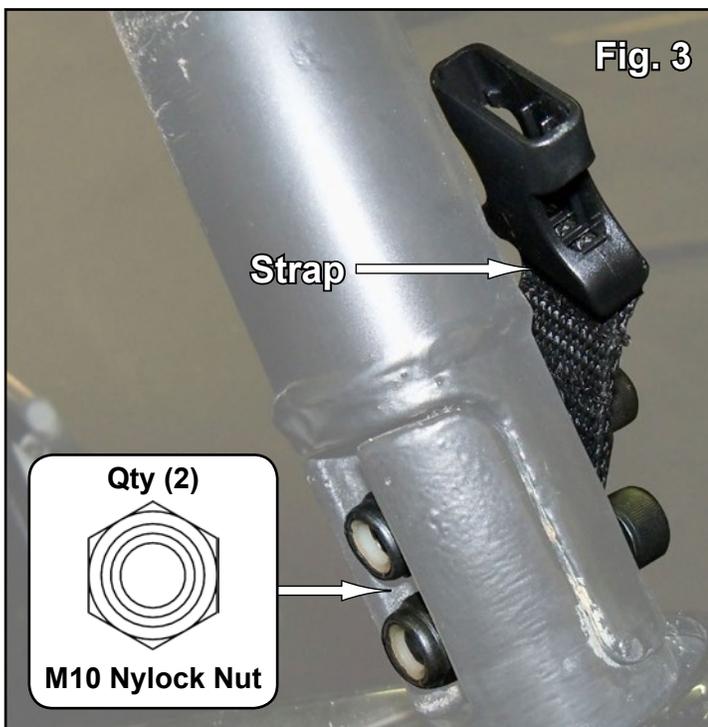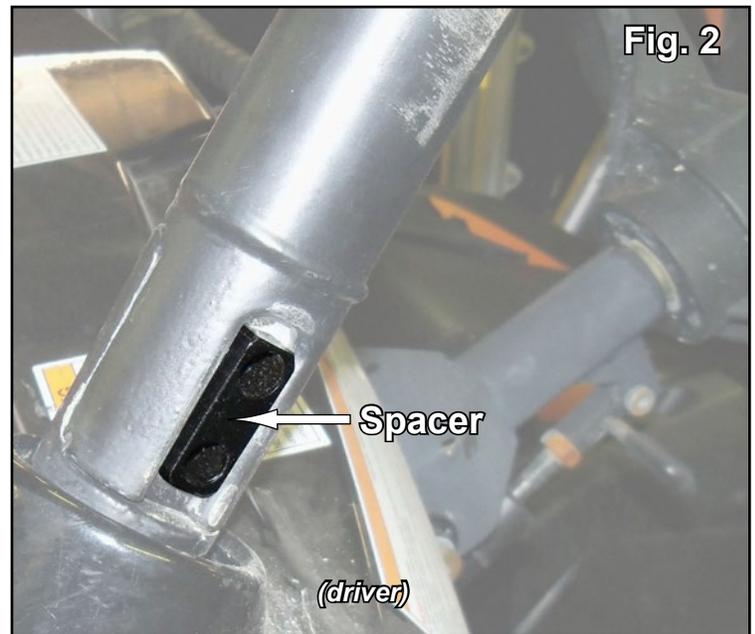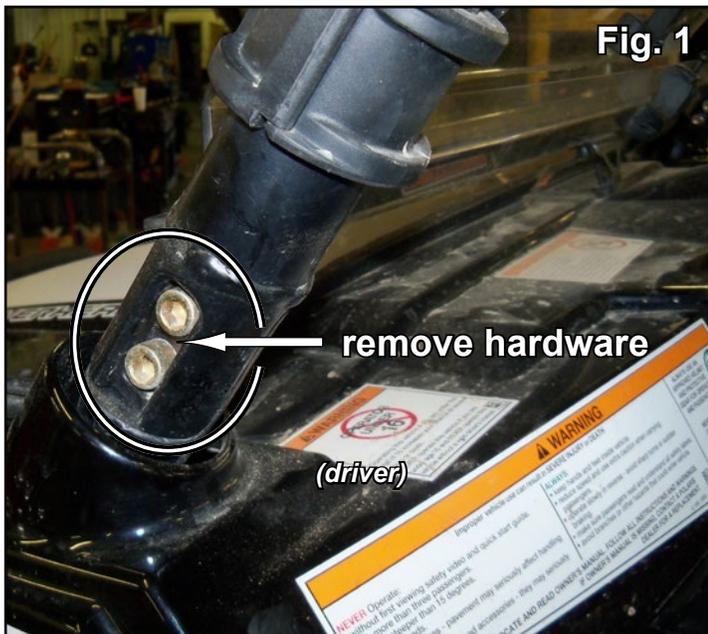

(illustrations continue on following pages)

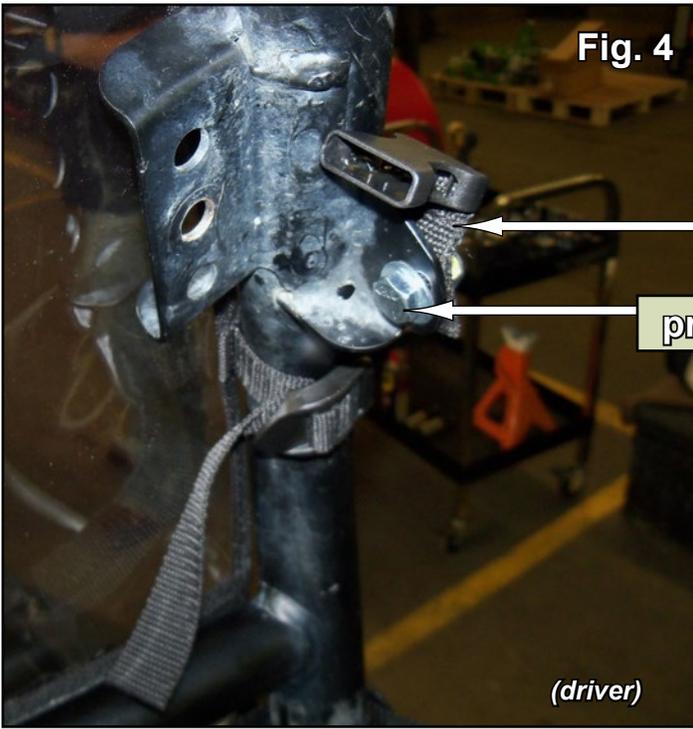

Strap

provided hardware

Soft Top Installation

1. Place Top onto Roll Cage and buckle front and rear Straps. Fig. 5.
2. Use provided Straps and secure Top to Roll Cage. **Use small adjustments to Straps when aligning Top to machine.** See Figs. 6 - 6a.



(illustrations continue on following pages)

