

INSTALLATION INSTRUCTIONS
Polaris Razor Heavy Duty Radiator



Read instructions and view illustrations before beginning.

Need help with your installation?

 sales@superatv.com	 www.superatv.com
 1-812-574-7777	 8:00am - 9:00pm EST M-Th 8:00am - 7:00pm EST Friday 9:00am - 2:00pm EST Saturday

Thank You
For Choosing
SUPERATV.COM

Liability Statement
SuperATV's products are designed to best fit users ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory, or aftermarket, parts will void any warranty provided by SuperATV and is not recommended. SuperATV's products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV to verify that they will work together.

Although SuperATV has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV products, user agrees that should damages occur, SuperATV will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV will warranty only parts provided by SuperATV. Any damage or problems with OEM housings, bearings, seals, or other manufacturers products will not be covered by SuperATV. SuperATV parts and products are not warranted if item was not installed properly, misused, or modified.

Do not tighten hardware completely unless noted.
Keep stock hardware for reuse.

REMOVAL

1. Remove Hood and unplug Headlights.
2. From both sides, remove plastic rivets located around Headlights. See Fig. 1.
3. Remove (6) Screws and remove Front End. See Fig. 2.
4. Remove (2) Screws and move Control Box. See Fig. 3.
5. Remove Lower Radiator Support. See Fig. 3.
6. Remove Upper, Lower, and Top Hoses.
7. Unplug Fan Wiring Harness.
8. Remove top (2) Radiator Bolts. Remove Radiator. See Fig. 3.
9. Unbolt Fan from Radiator.

INSTALLATION

10. Transfer stock Spacers and Grommets to Heavy Duty Radiator (A); Use silicon spray to ease installation. See Fig. 4.
11. Attach Fan to Heavy Duty Radiator (A) with supplied Nuts and Washers. See Fig. 4.
12. Reverse Steps 8 through 4 to install Heavy Duty Radiator (A).
13. Reinstall necessary components.
14. Fill with anti-freeze and check after running machine for 30 minutes.


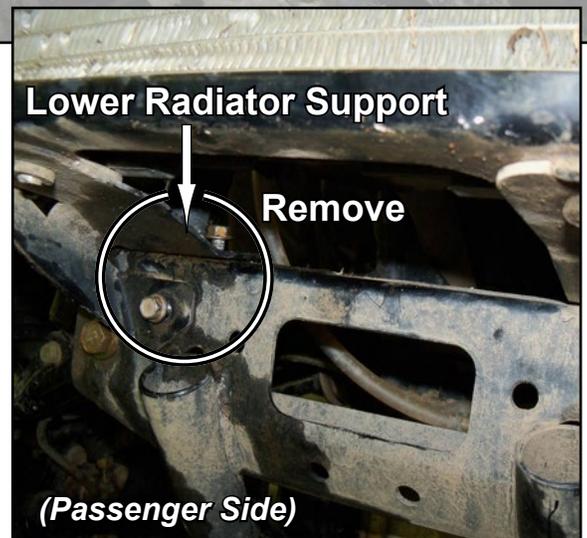


Fig. 4



2011-2012 Models require trimming of Front Bumper Support. Models with SuperATV's Front Bumper Brace will have to compress tubes as shown.

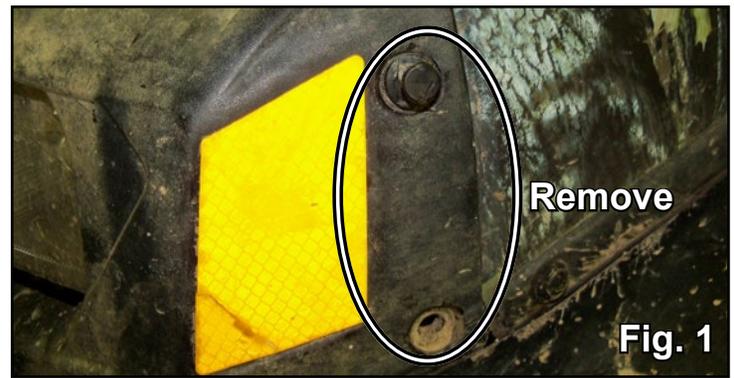