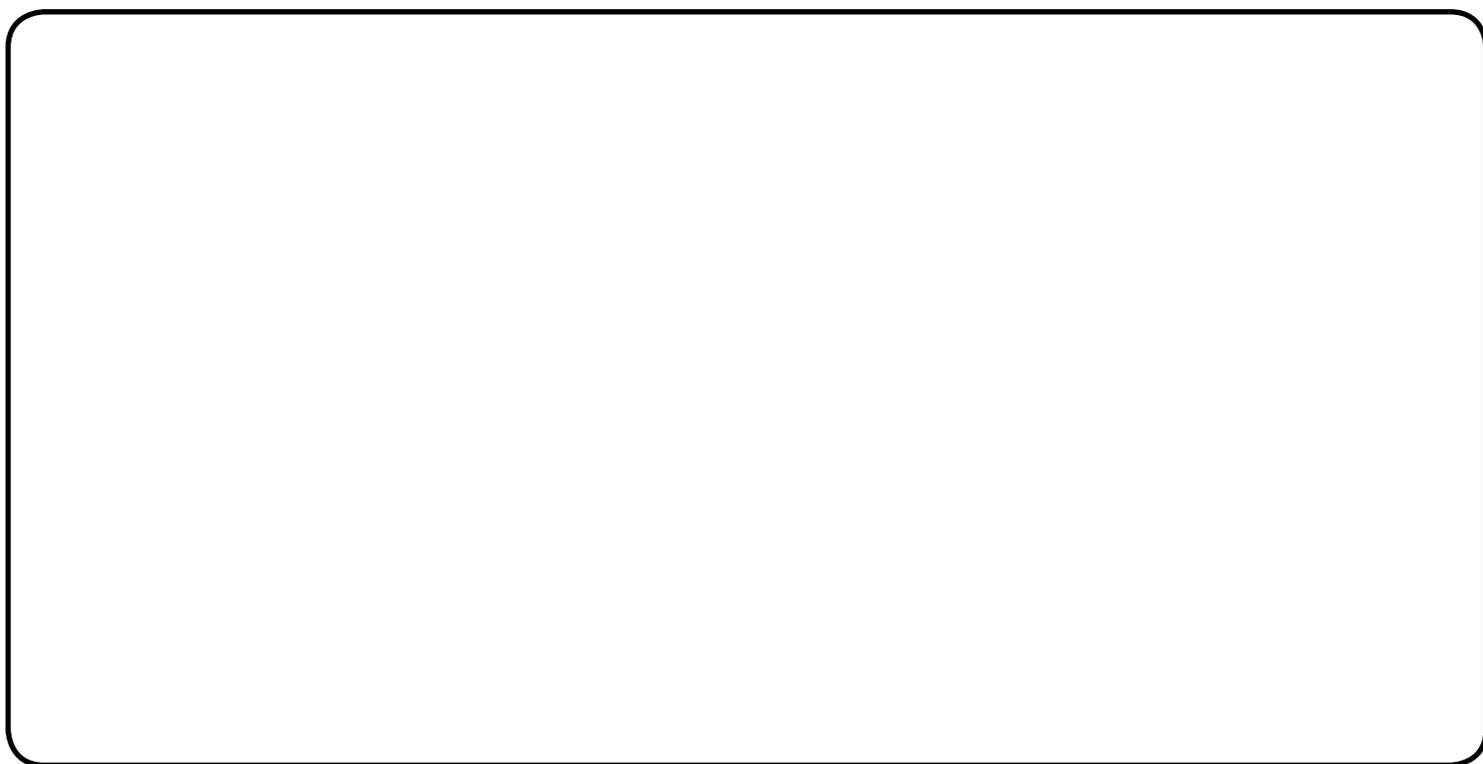



Please attach UPS Return Label here:

A large, empty rectangular box with rounded corners, intended for attaching a UPS Return Label. The box is outlined in black and occupies the central portion of the page.

INSTALLATION INSTRUCTIONS

Arctic Cat Prowler Power Steering

Item	Description	Qty
A	Motor Mount	1
B	Stiffener	2
C	Control Module Mount	1
D	Upper Shaft	1
S	Lower Shaft	1

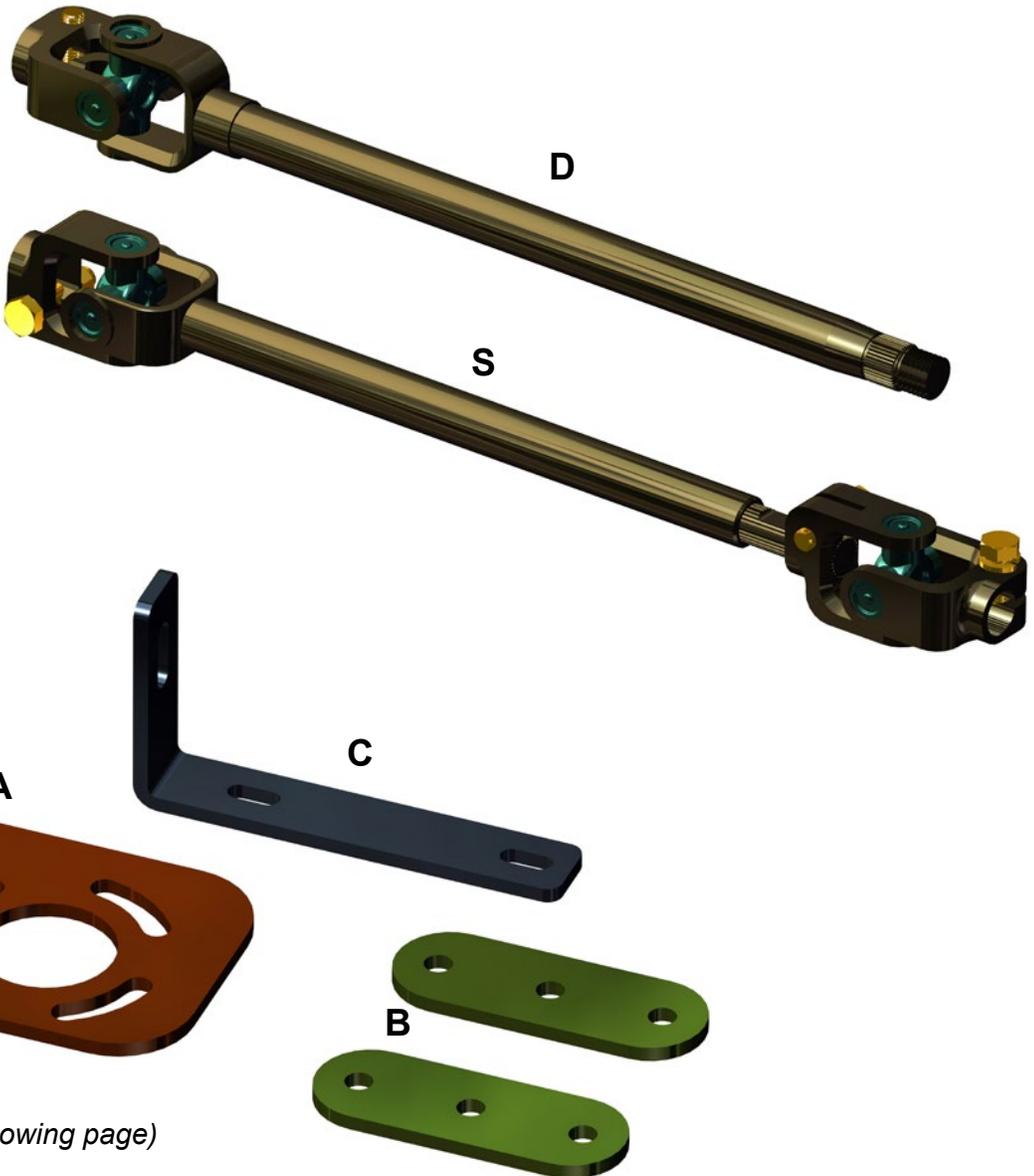

(Kit contents continue on following page)

Read instructions and view illustrations before beginning.

Need help with your installation?

 sales@superatv.com
 www.superatv.com

 1-812-574-7777
  8:00am - 9:00pm EST M-Th
 8:00am - 7:00pm EST Friday
 9:00am - 2:00pm EST Saturday

Liability Statement
 SuperATV's products are designed to best fit users ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory, or aftermarket, parts will void any warranty provided by SuperATV and is not recommended. SuperATV's products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV to verify that they will work together.

Although SuperATV has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV urges operators and occupants to wear a helmet and appropriate riding gear at all times.


By purchasing and installing SuperATV products, user agrees that should damages occur, SuperATV will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV will warranty only parts provided by SuperATV. Any damage or problems with OEM housings, bearings, seals, or other manufacturers products will not be covered by SuperATV. SuperATV parts and products are not warranted if item was not installed properly, misused, or modified.


*Thank You
 For Choosing*

(Kit contents continued)


Item	Description	Qty
N	Wiring Harness	1
P	Motor	1
Q	Control Module	1
R	Wiring Connectors Kit	1

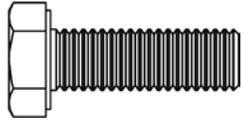

M8-1.25 x 25mm Lg. HHCS

 


M6-1.0 x 16mm Lg. HHCS
-includes washers (not shown)

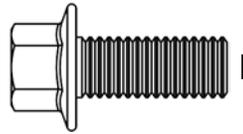

M8-1.25 x 20mm Lg. FHCS




M8-1.25 Nylock Nut

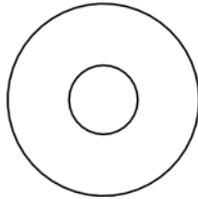

M8 Flat Washer




N

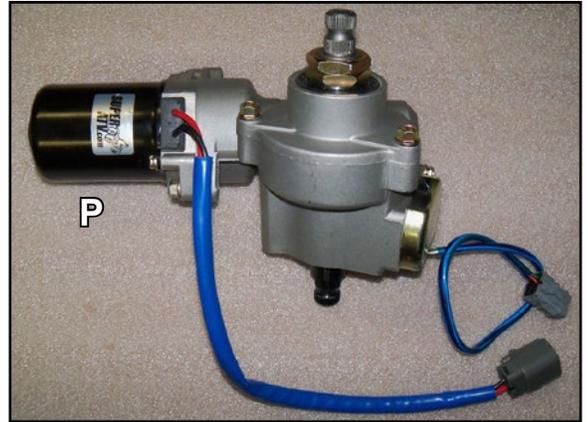

P






Q

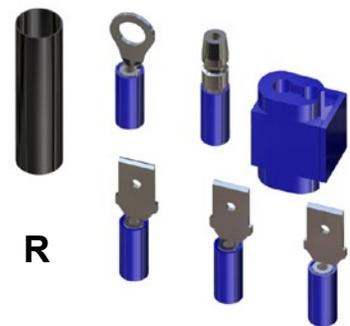

R


CONNECTIONS

- Before installing, ensure that all waterproof connections are properly seated.
- If Gaskets are not seated, as shown, use a Flathead Screwdriver to seat.

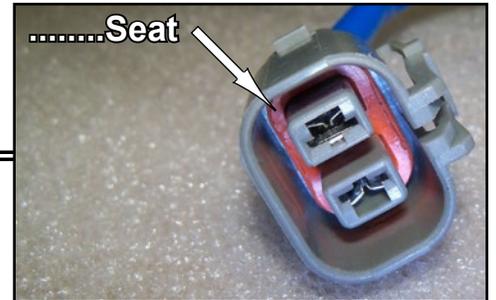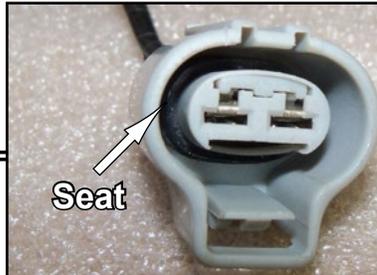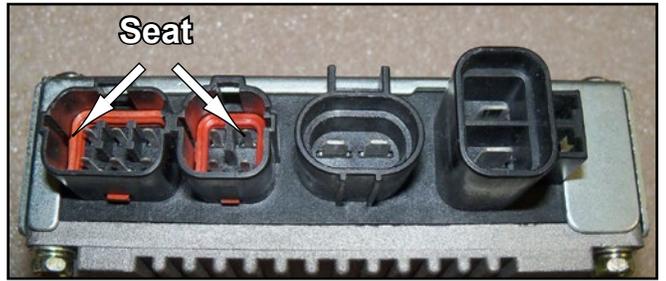

Removal: Keep all components removed from machine.




1. Remove Lower Steering Shaft from Rack and Pinion. See Fig. 1.
2. Remove Steering Shaft/Wheel from Lower Steering Shaft.
3. Remove Instrument Pod. See Fig. 2.
4. Remove Parking Brake Knob and hardware. See Fig. 2a.
5. Remove Ignition Switch. See Fig. 2.
6. Unplug necessary Wire Harness' and remove Dash. See Fig. 3.

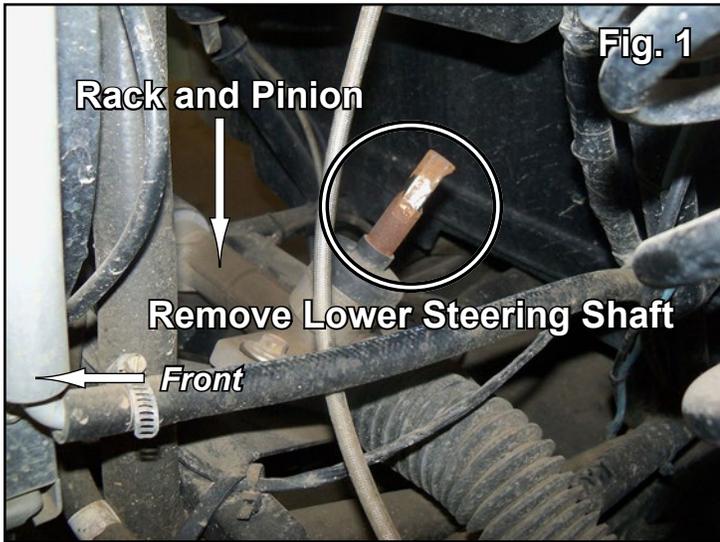







Do not tighten hardware completely unless noted.


Installation:

1. Insert Upper Shaft (D) into Steering Tube and reinstall Steering Wheel; reinstall stock Washers and Bushings. See Figs. 1 - 1a.
2. Install Lower Shaft (S) to Rack and Pinion with supplied hardware. See Fig. 2. Tighten completely.
3. Install Motor (P) to Lower Shaft (S). See Motor Shafts Detail and Fig. 3.
4. Install Motor Mount (A) to Motor (P) with M8-1.25 x 20mm Lg. FHCS. See Fig. 4.
 - Install Upper Shaft (D) to Motor (P) with supplied hardware. See Fig. 4.
 - Secure Motor Mount (A) and Stiffener (B) to Frame with M8-1.25 x 25mm Lg. HHCS, M8 Flat Washers, and M8-1.25 Nylock Nuts. See Figs. 4a - 4b.
5. Install Control Module Mount (C) and Stiffener (B) to Frame with M8-1.25 x 25mm Lg. HHCS, M8 Flat Washers, and M8-1.25 Nylock Nut. See Figs. 5 - 5a.
 - Install Control Module (Q) with M6-1.0 x 16mm Lg. HHCS. See Fig. 5a.
 - Plug in Wire Harness (N). See Wiring Details pages 9 - 10.
6. Tighten all hardware completely.
7. Reverse steps taken during removal and reinstall necessary components.
 - Trim plastic as shown in Fig. 6 for Lower Shaft (S) clearance.

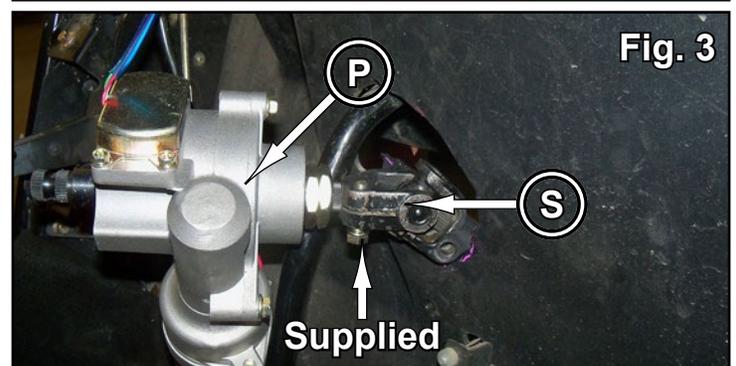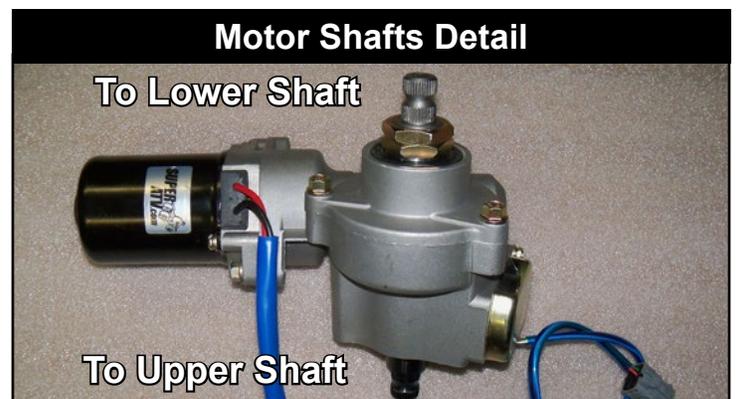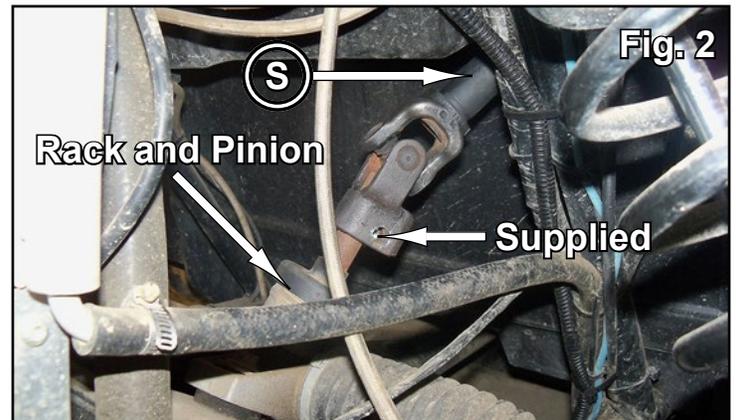

(Installation illustrations continue on following pages)

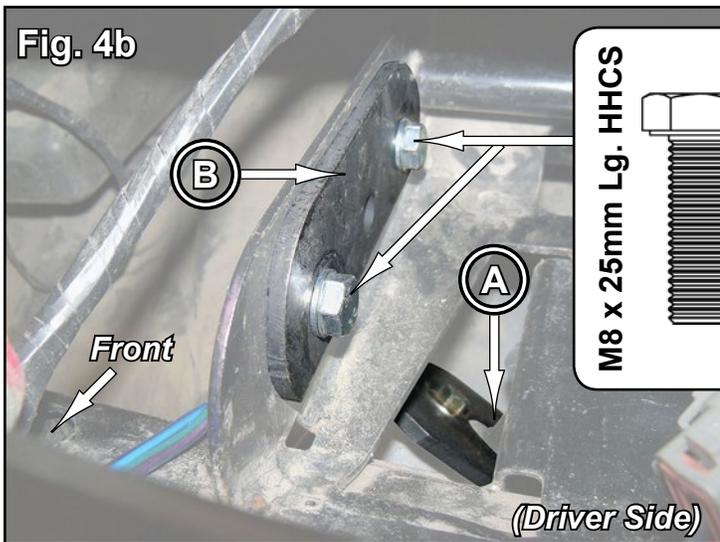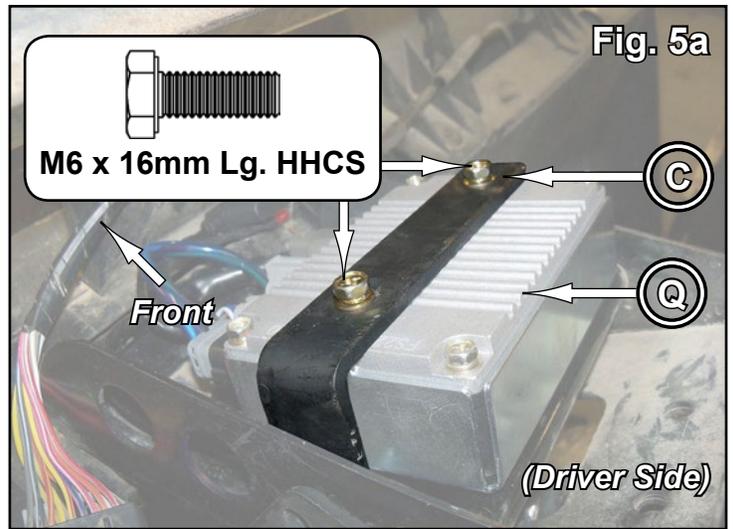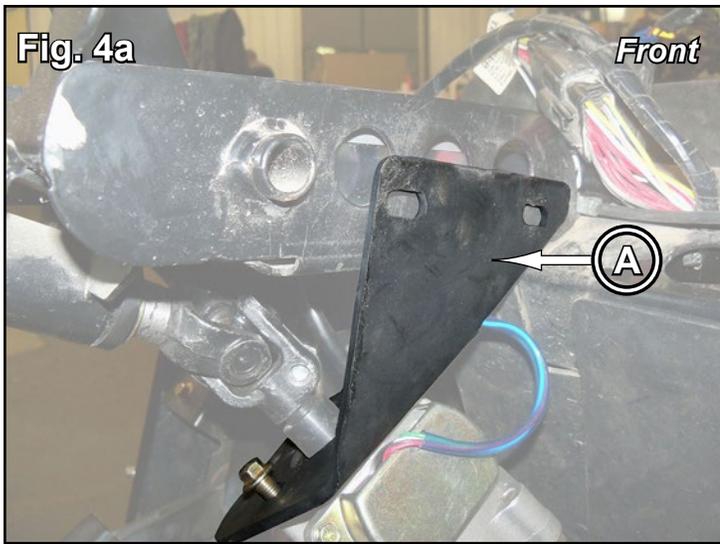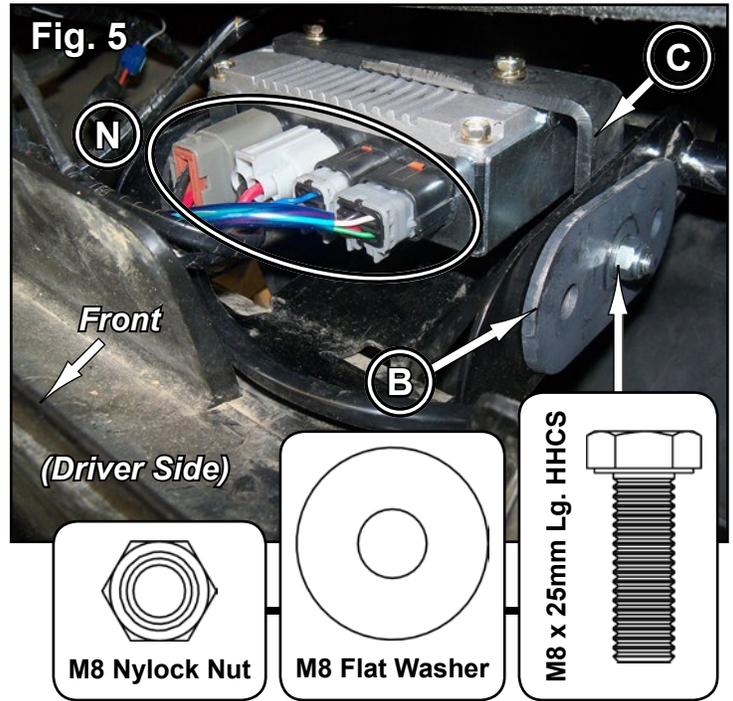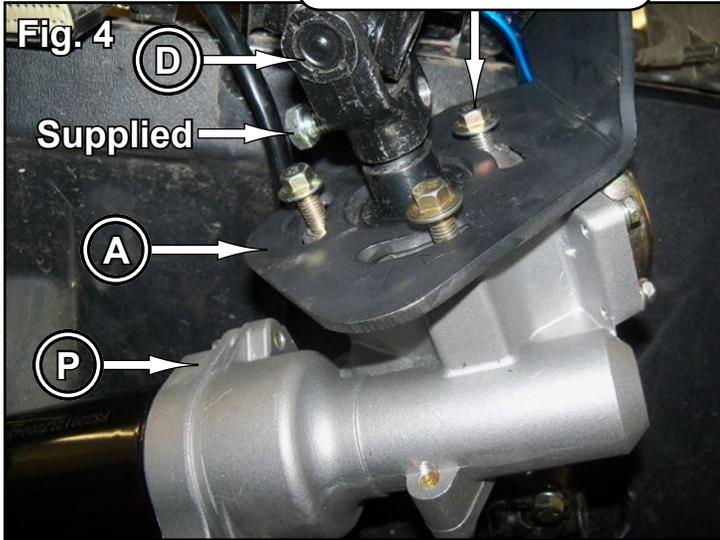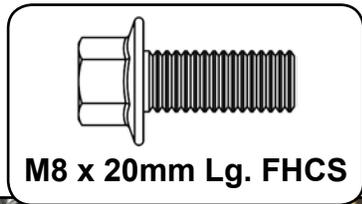

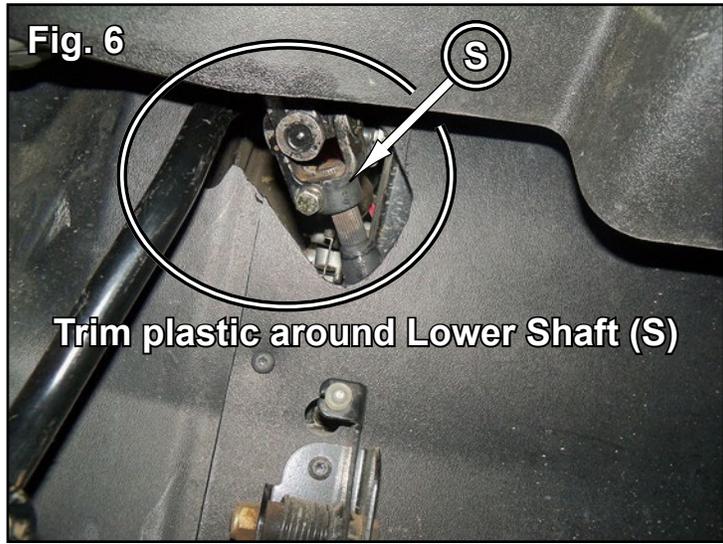


WIRING DETAILS

(White) To Switched 12V Source
(See 12V Source Connection Details)

(Black) To Battery, Negative (-)

(Red) To Battery, Positive (+)

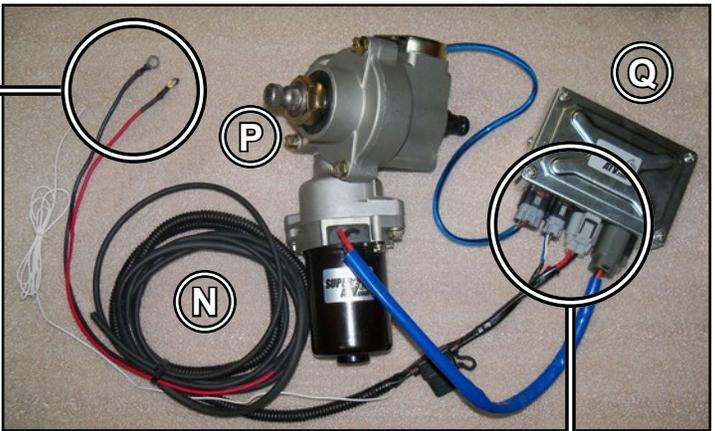


When activated, Diagnostic Light will flash (1) time for about (1) second before turning off indicating proper function. Should different patterns occur, contact SuperATV.

Secure Diagnostic Light in a visible location.



Plug	Function
A	Torque Sensor
B	Switched 12V Source
C	Power
D	Motor

Battery Connections

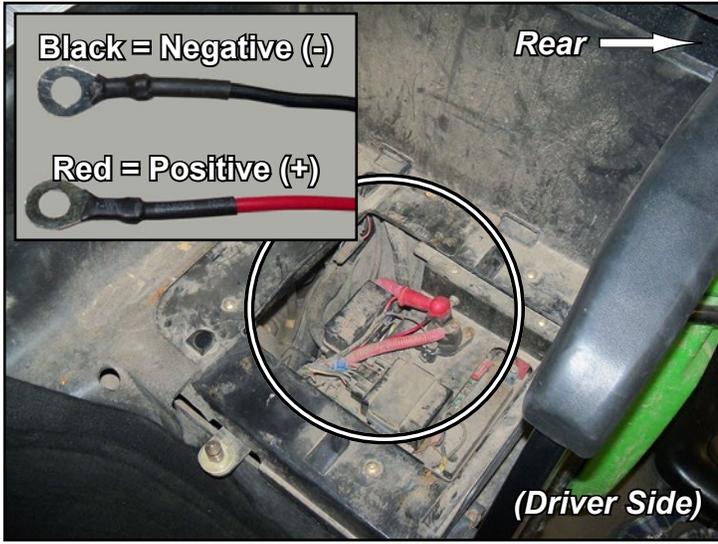

Battery located under Driver Seat.

Switched 12V Source Connection

Connect White Wire from Wire Harness (N) to Orange wire with Scotch Lock (included).

