



740B Clifty Drive
Madison IN, 47250

Phone: 1-812-574-7777

RZR Gas Pedal: GP-RZR

Installation

1. Using a small screwdriver, pry the c-clip from the end of the pivot. (See photos below)
2. With a pair of vice grips, clamp onto the end of the spring that is hooked to the throttle pedal. Carefully unhook the spring and allow it to return to its natural position, then remove the other end from the hole in the firewall.
3. Remove the throttle cable from the factory pedal by pulling outward on the free end of the cable to dislodge it from its recess.
4. Slide the pedal from the pivot shaft and set the bushings aside.
5. Remove the bolt and plastic spacer from the factory pedal and install it on the SuperATV pedal.
6. Reinstall the SuperATV pedal reverse of the removal of the factory pedal.

