
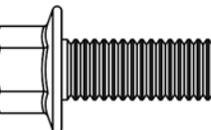


8x  1/4"-14 x 3/4" Lg. PHMS

4x  M8-1.25 x 20mm Lg. FHCS

4x  M8-1.25 Nylock Nut

*(kit contents continue on following page)*

**Read instructions and view illustrations before beginning.**

**Need help with your installation?**



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th  
8:00am - 7:00pm EST Friday  
9:00am - 2:00pm EST Saturday

*Thank You  
For Choosing*

# SUPERATV.COM

#### Liability Statement


SuperATV's products are designed to best fit users ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory, or aftermarket, parts will void any warranty provided by SuperATV and is not recommended. SuperATV's products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV to verify that they will work together.

Although SuperATV has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV urges operators and occupants to wear a helmet and appropriate riding gear at all times.


By purchasing and installing SuperATV products, user agrees that should damages occur, SuperATV will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV will warranty only parts provided by SuperATV. Any damage or problems with OEM housings, bearings, seals, or other manufacturers products will not be covered by SuperATV. SuperATV parts and products are not warranted if item was not installed properly, misused, or modified.

*(kit contents continued)*

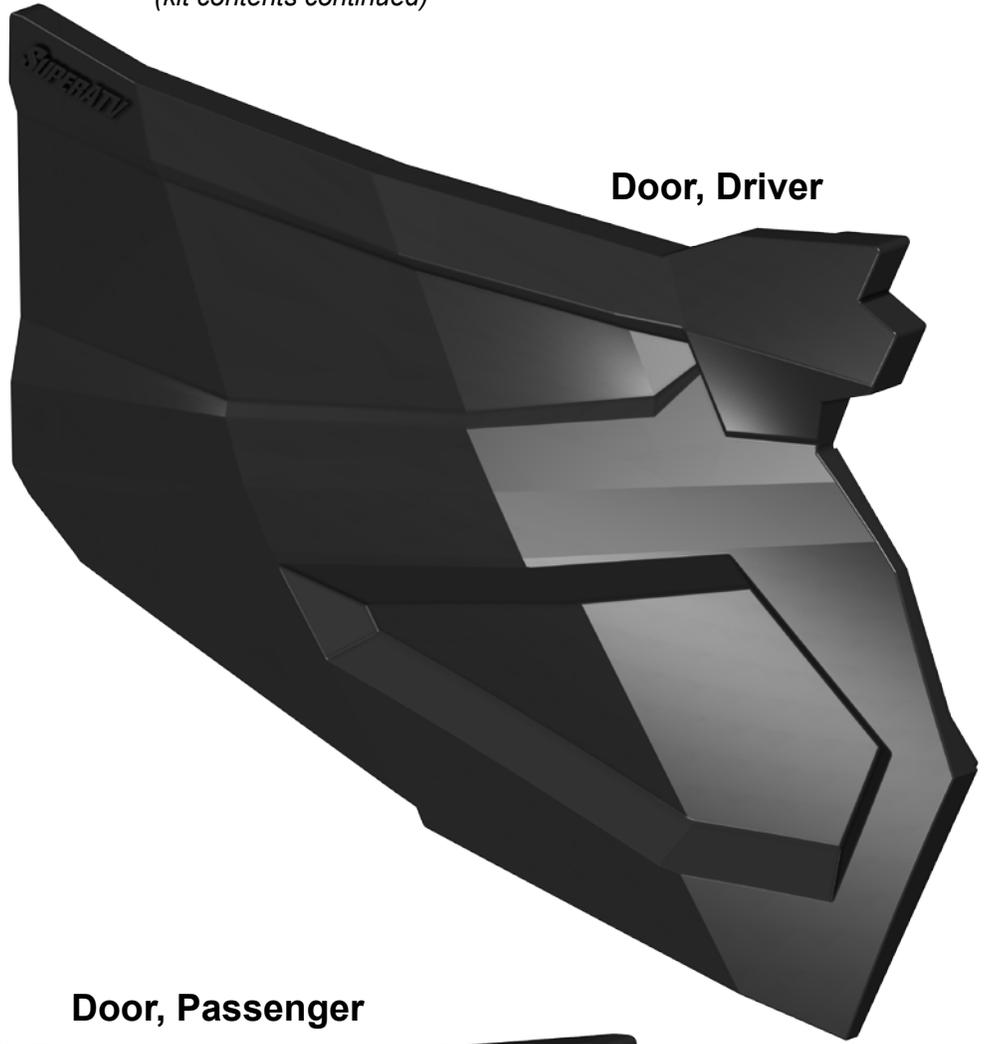


**Door, Driver**

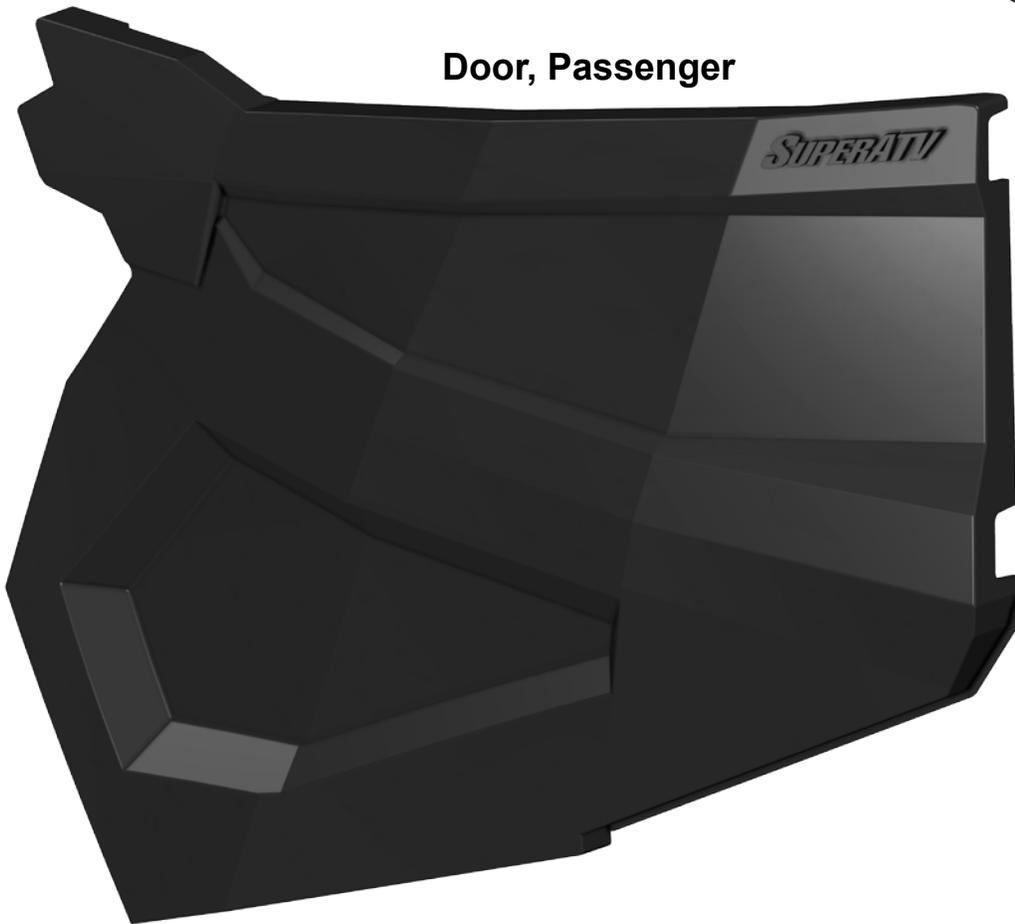

**Door, Passenger**

Reference only; do not assemble at this time

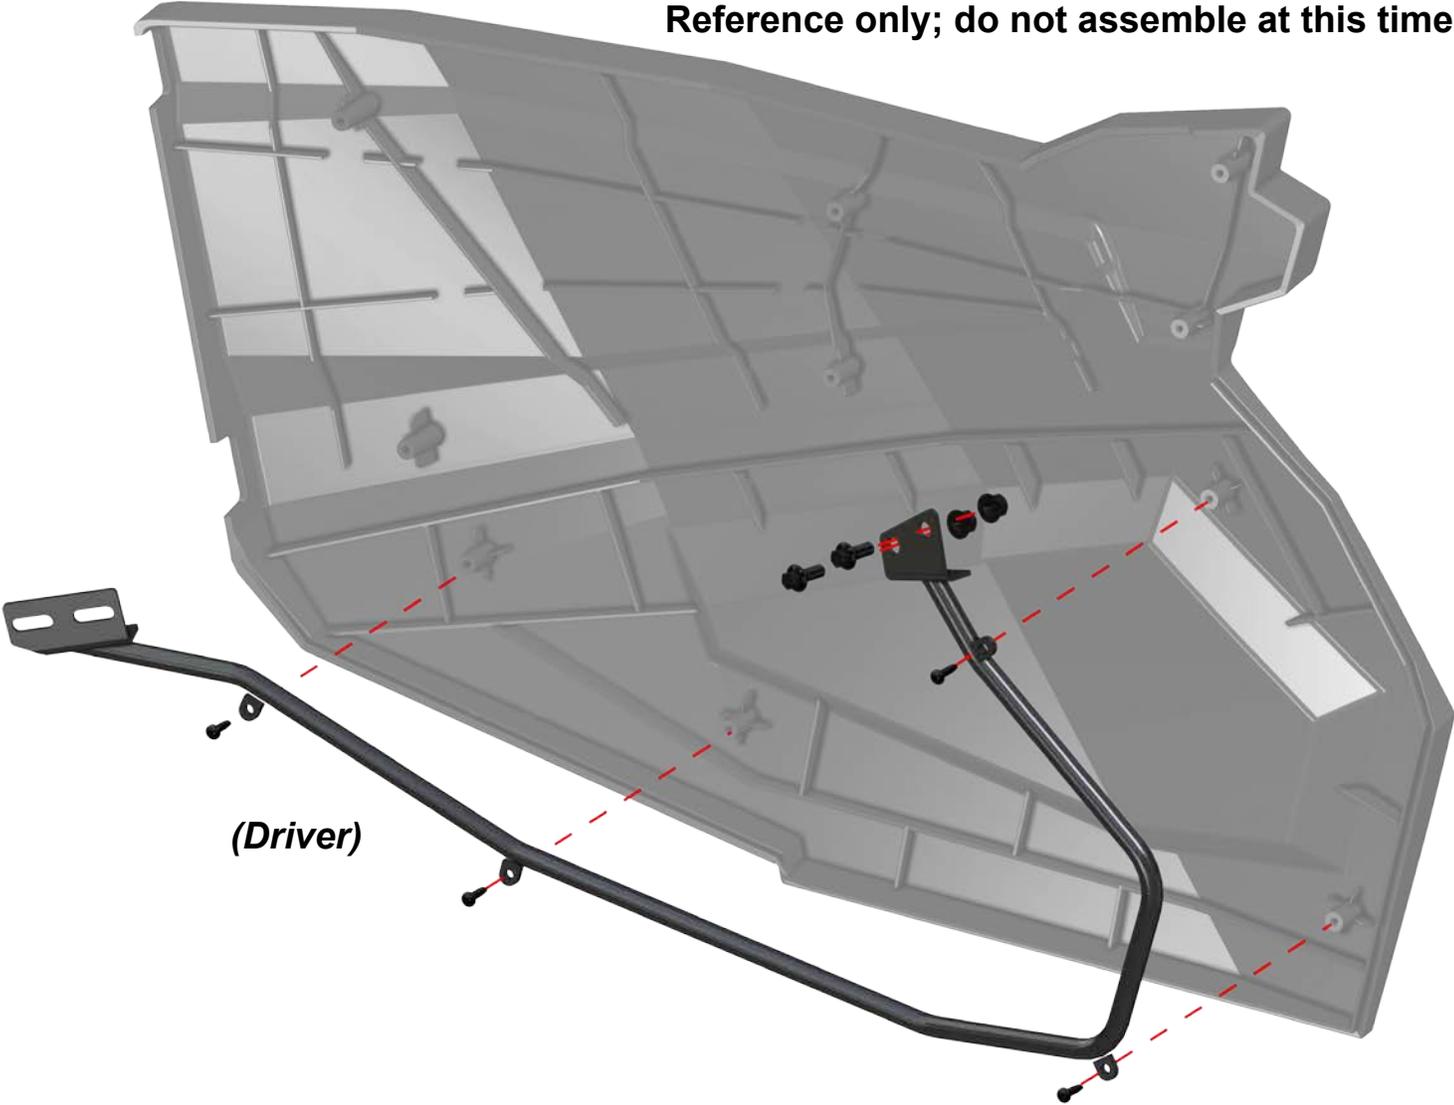

**⚠ Do not tighten any hardware completely unless noted**

1. Install Brace, Driver to stock Door Frame.

- Secure with M8-1.25 x 20mm Lg. FHCS and M8-1.25 Nylock Nuts first.
- Use stock hardware to secure opposite end of Brace, Driver to stock Door Frame.



2. Install stock Door Frame to Door, Driver with stock hardware.



3. Secure Brace, Driver to Door, Driver with 1/4"-14 x 3/8" Lg. PHMS.



- repeat steps for opposite side.
- align to machine.
- tighten hardware completely unless noted.

**STOP** If optional graphics kit was purchased, go to page 7 for installation instructions.

# INSTALLATION INSTRUCTIONS

## Vinyl Graphics Kit

### Items Needed for Vinyl Graphics Installation

Spray bottle of soapy water (1 tsp. mild soap per 1 gal. water)
Squeegee (included)
Paper Towels
Lint Free Towel
A helper (Large graphics install easier with more than one person)

**Read instructions before beginning.**

### Graphics Installation

**Please NOTE:** An installation video can be seen at [www.superatv.com/Videos3.aspx](http://www.superatv.com/Videos3.aspx)

1. Completely clean all plastic surfaces to which graphics will be attached. Do not use harsh cleaners like ammonia based window cleaner as this can damage plastic and eliminate vinyl's ability to adhere. Remove wax from machine if necessary.
2. *Before installing, understand where each piece will be installed.*
3. Your graphic has extra non-printed pieces of vinyl on the edges. You can cut pieces of this and practice before actually applying your graphic. **IMPORTANT! Be Careful Not To Cut Your Printed Graphic!** A 5 gallon bucket is a similar surface and will be good practice to help you determine amount of soapy water to be applied, how to squeegee, etc.
4. Wet plastic with soapy water. Make sure no areas remain dry.
5. Spray printed side of graphic with soapy water.
6. Start peeling backing off vinyl to expose adhesive and spray soapy water to adhesive as you peel. Soapy water will allow graphic to be easily slid into position and keep vinyl from sticking to itself as you are peeling. **If you are in doubt apply more vs. less soapy water.**
6. Apply graphic, sticky side down, to appropriate area of machine.
7. Once graphic is in place, start at graphics center and work towards outside using a squeegee to remove air bubbles and liquid. Continue until all air bubbles and liquid have been removed. Be careful as graphics begin to dry not to scratch or scrape them with squeegee. You can re-apply light coats of soapy water as needed.
8. Spray outside of graphic with soapy water and squeegee entire graphic again with more pressure to activate adhesive in vinyl.  
REPEAT STEPS 4 - 7 until all graphics have been installed.
9. Let graphics dry for at least 30 minutes. Gently push an out of the way piece and if it does not move then vinyl has adhered.
10. After all vinyl is dry, lightly spray with soapy water and squeegee again.
11. Let machine dry at least 24 hours before riding.

### Graphics Care

- Soap and water are best way to clean graphics.
- If using a pressure washer, keep nozzle at least 18" from graphics to reduce risk of forcing graphics from machine.
- Do not use petroleum based cleaners or clear coat paints directly on graphics.
- If waxing machine, keep wax away from graphics. Wax will not make graphics look better and can cause damage. If wax gets on graphics, remove with rubbing alcohol and a 100% cotton cloth followed by a thorough washing with soap and water.
- Keep gasoline from direct contact with graphics as gasoline can change color of vinyl.