


**INSTALLATION INSTRUCTIONS**  
**Polaris RZR, Front Brush Guard**

Item	Description	Qty
A	Front Brush Guard, Upper	1
B	Front Brush Guard, Lower	1

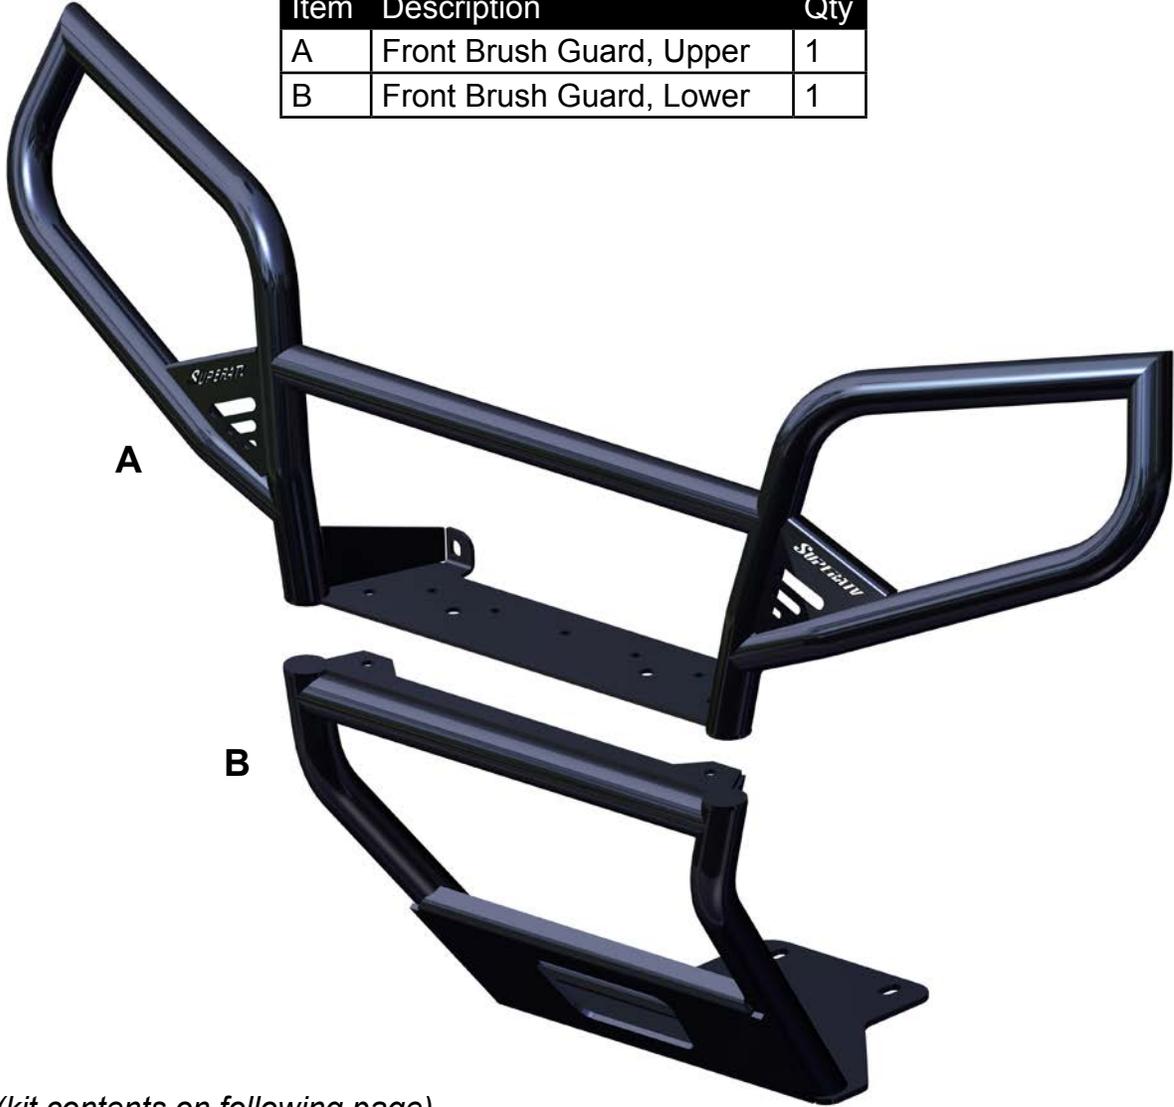

*(kit contents on following page)*

**Read instructions and view illustrations before beginning.**

**Need help with your installation?**

 [sales@superatv.com](mailto:sales@superatv.com)
 [www.superatv.com](http://www.superatv.com)

 1-812-574-7777
  8:00am - 9:00pm EST M-Th  
 8:00am - 7:00pm EST Friday  
 9:00am - 2:00pm EST Saturday

**Liability Statement**  
 SuperATV's products are designed to best fit users ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory, or aftermarket, parts will void any warranty provided by SuperATV and is not recommended. SuperATV's products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV to verify that they will work together.

Although SuperATV has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV products, user agrees that should damages occur, SuperATV will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV will warranty only parts provided by SuperATV. Any damage or problems with OEM housings, bearings, seals, or other manufacturers products will not be covered by SuperATV. SuperATV parts and products are not warranted if item was not installed properly, misused, or modified.


*Thank You*  
*For Choosing*  
**SUPERATV.COM**


(kit contents continued)


**Some included hardware will not be used. Discard or keep.**


Qty (2)  6.5mm Thick Spacer

Qty (2)  27mm Lg. Thick Spacer

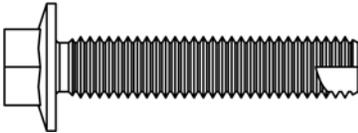Qty (2)  M8-1.25 x 40mm Lg. Self Tapping

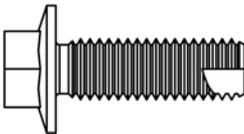
Qty (2)  M8-1.25 x 25mm Lg. Self Tapping

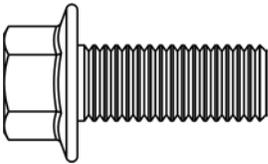
Qty (2)  M10-1.50 x 25mm Lg. FHCS

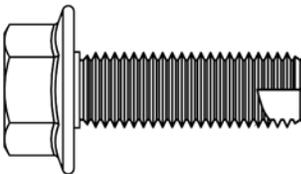
Qty (2)  M10-1.50 x 30mm Lg. Self Tapping


Qty (2)  M10-1.50 Nylock Nut

**RZR and RZRS Lower Mounting Hardware: Qty (2) each**

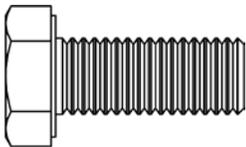 M10-1.50 x 25mm Lg. HHCS

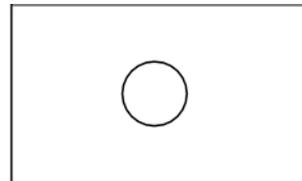 M10-1.50 Plate Nut

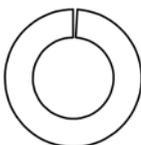 M10 Lock Washer

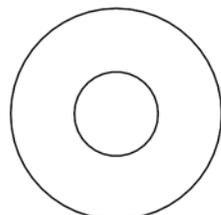
 M10 Flat Washer

Do not tighten hardware completely unless noted. Keep all components removed from machine.



1. Install Front Brush Guard, Upper (A) to machine. See Figs. 1 - 1a to determine which hardware should be used.

*-Depending on grille type, wires behind grille may need cleared for hardware to pass thru-*



2. Install Front Brush Guard, Lower (B) to underneath of machine. See Figs. 2 - 2a to determine which hardware will be used.
3. Join Front Brush Guard, Upper (A) to Front Brush Guard, Lower (B) with M10-1.50 x 25mm Lg. FHCS and M10-1.50 Nylock Nuts. See Fig. 3.
4. Align to machine and tighten all hardware.


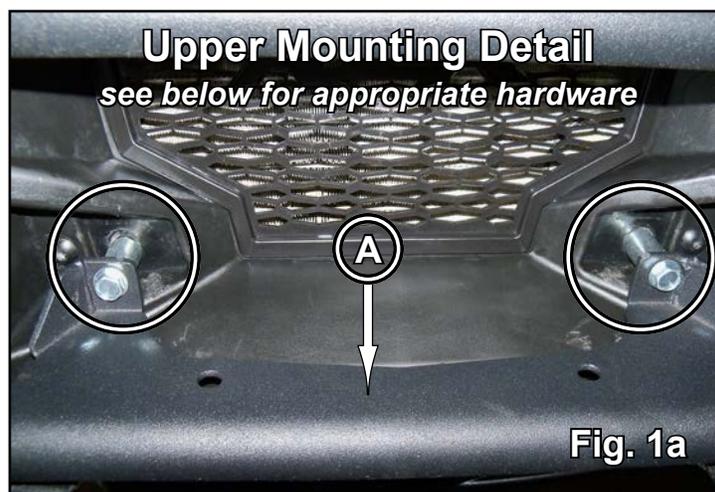


2010 and up

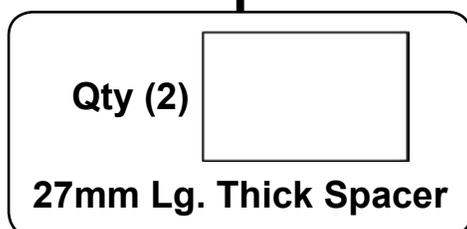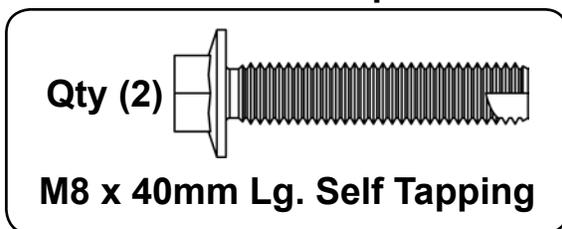


2009 and older

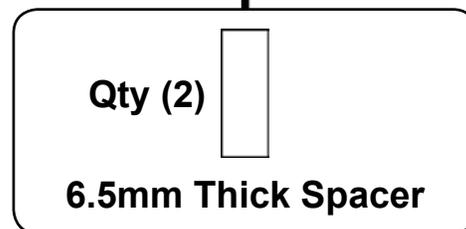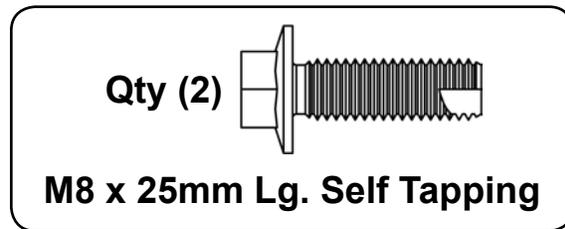

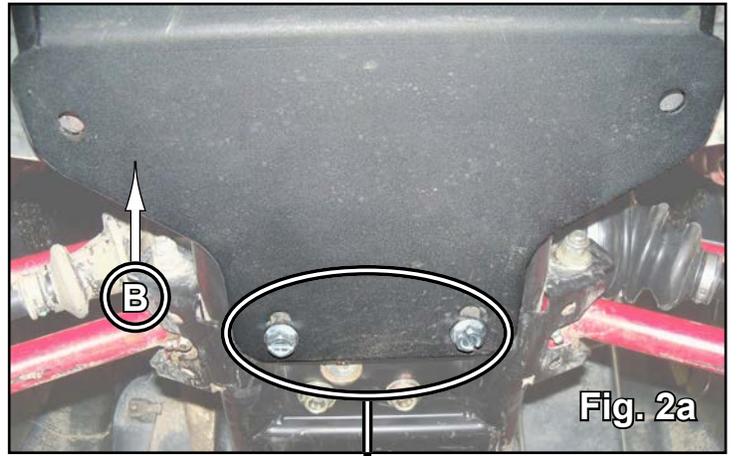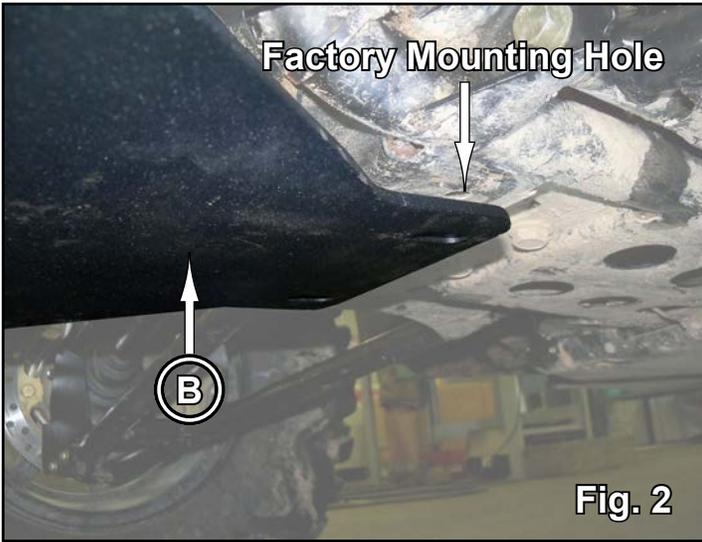


**RZRXP use only M10 x 30mm Lg. Self Tapping Screws**

Qty (2)

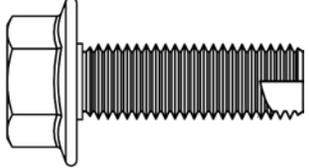

**M10 x 30mm Lg. Self Tapping**

**RZR and RZRS Models use following hardware**

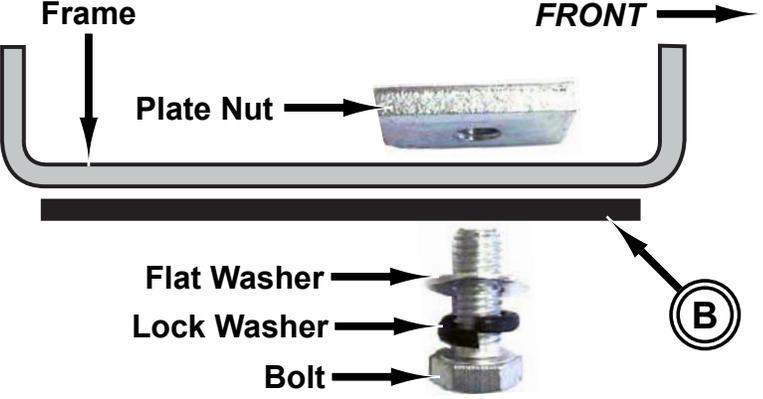

Frame

FRONT

Plate Nut


Flat Washer

Lock Washer


Bolt

B


Qty (2) each

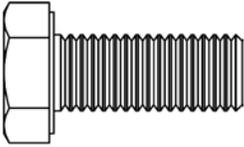


**M10 x 25mm Lg. HHCS**

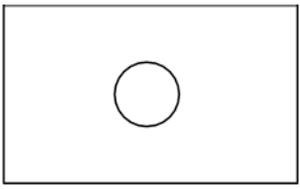

**M10 Plate Nut**

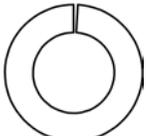

**M10 Lock Washer**

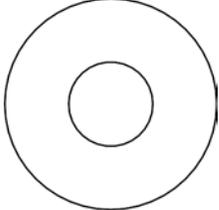

**M10 Flat Washer**

Fig. 3

