
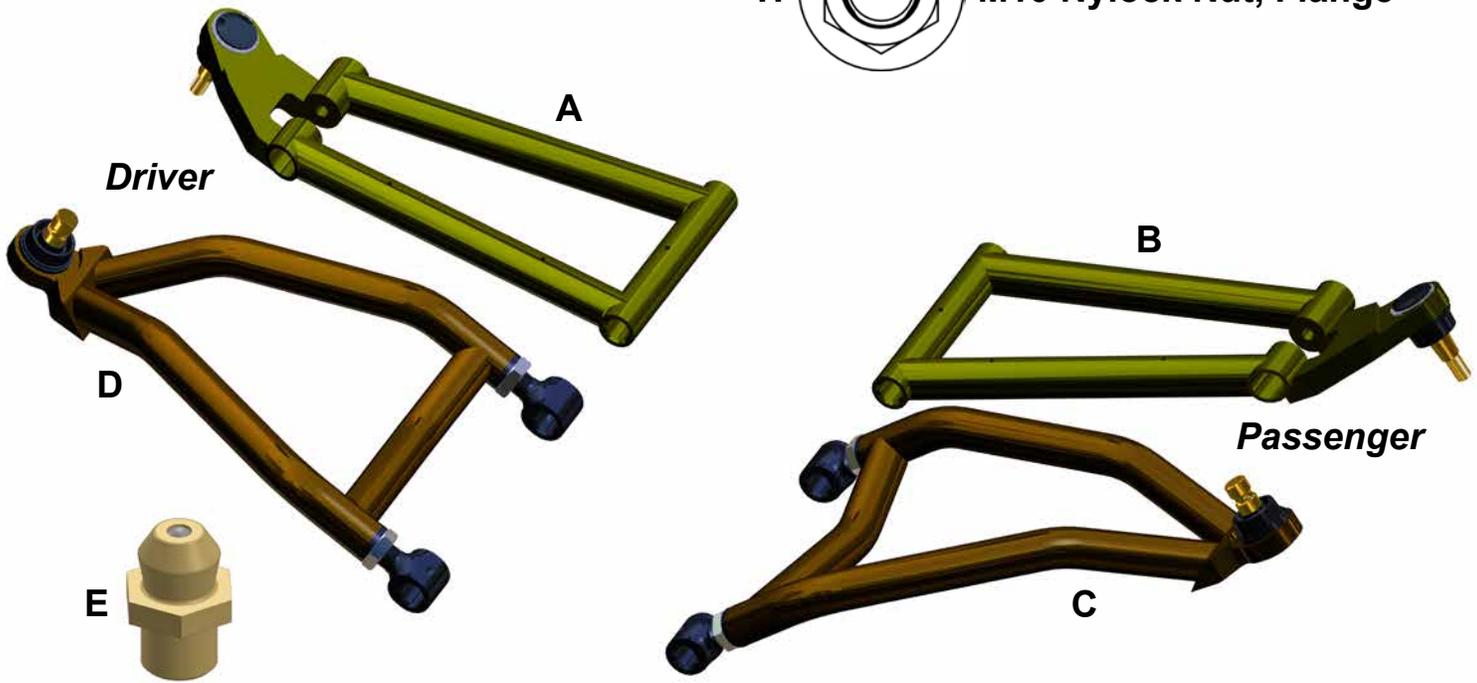


INSTALLATION INSTRUCTIONS
Can-Am Commander High Clearance
Forward Lower A-Arms

Item	Description	Qty
A	Upper A-Arm, Driver	1
B	Upper A-Arm, Passenger	1
C	Lower A-Arm, Passenger	1
D	Lower A-Arm, Driver	1
E	Zerk Fittings	6
F	M5-.80 x 13mm Lg. PHMS	4
G	M10-1.5 x 70mm Lg. FHCS	2
H	M10-1.5 Nylock Nuts, Flange	2

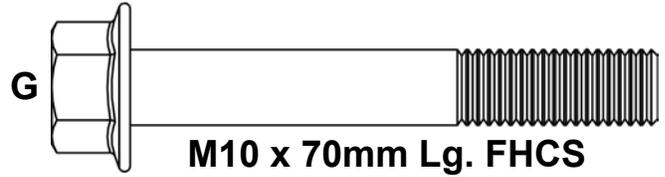

Read instructions and view illustrations before beginning.

Need help with your installation?

 sales@superatv.com  www.superatv.com

 1-812-574-7777  8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Thank You
For Choosing
SUPERATV.COM

Liability Statement
SuperATV's products are designed to best fit users ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory, or aftermarket, parts will void any warranty provided by SuperATV and is not recommended. SuperATV's products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV to verify that they will work together.

Although SuperATV has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV products, user agrees that should damages occur, SuperATV will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.


SuperATV will warranty only parts provided by SuperATV. Any damage or problems with OEM housings, bearings, seals, or other manufacturers products will not be covered by SuperATV. SuperATV parts and products are not warranted if item was not installed properly, misused, or modified.

Removal: *Keep hardware and components removed from machine.*

1. Raise front of machine off ground, secure with jack stands, and remove Wheels.
2. Carefully drill out rivets securing Brake Line Clamps to A-Arms and remove Clamps.
3. Remove Knuckles from A-Arms.
4. Remove Shocks from Upper A-Arms.
5. Remove A-Arms from Frame.




Installation: *Do not tighten hardware completely unless noted.*

1. Install stock Bushings, Cushions, and Wear Plates into A-Arms (A-D). See Fig. 1.
 - Install Zerk Fittings (C) into Pivot Blocks and Upper A-Arms (A-B). See Fig. 1.
 - For a starting point, set Pivot Blocks to 3/4". See Fig. 1.
2. Install Upper A-Arms (A)(B) to Frame with stock hardware. See Fig. 2.
3. Reinstall Shocks to Upper A-Arms (A)(B) with M10-1.5 x 70mm Lg. FHCS (G) and M10-1.5 Nylock Nuts, Flange (H). See Fig. 2a.
4. Install Lower A-Arms (C)(D) to Frame with stock hardware. See Fig. 3.
5. Reinstall Knuckles to Lower A-Arms (C)(D) with stock hardware. *NOTE: Use provided Nut and Cotter Pin for Upper Ball Joint.* See Fig. 3.
6. Route Brake Lines so that no binding can occur when in use. Secure to Upper A-Arms (A-B) with M5-.80 x 13mm Lg. PHMS (F) and stock Clamps. See Fig. 4.
7. Tighten all hardware completely. Reinstall Wheels.
8. Check Toe of vehicle and adjust if necessary.

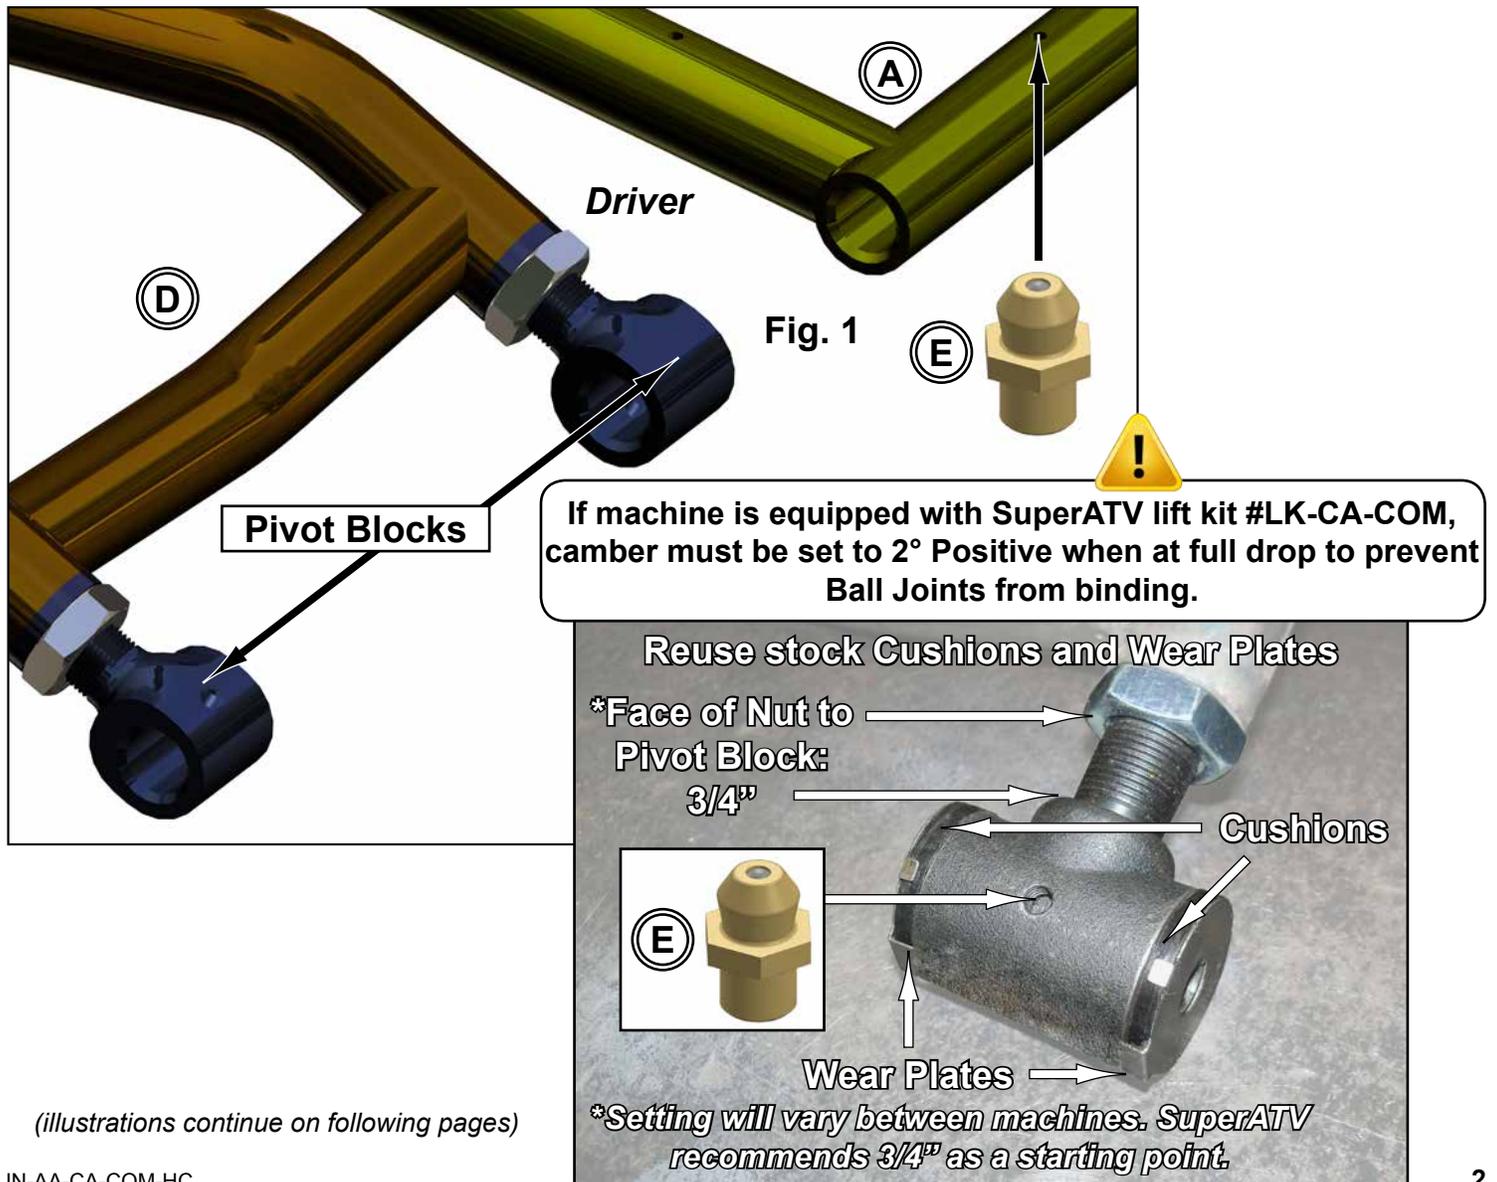


(illustrations continue on following pages)

SuperATV recommends using Loc-Tite on Nuts when installing A-Arms to Frame.

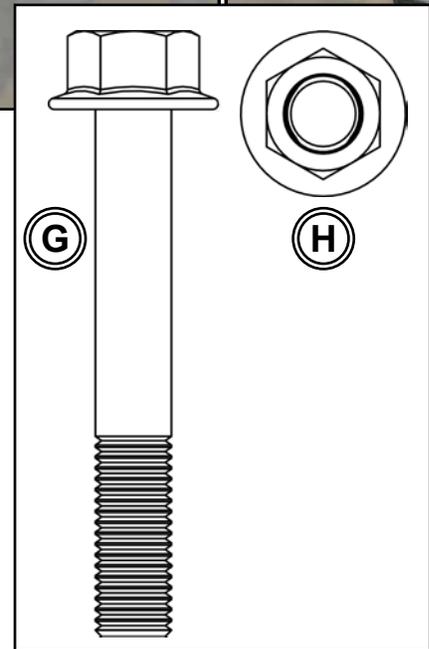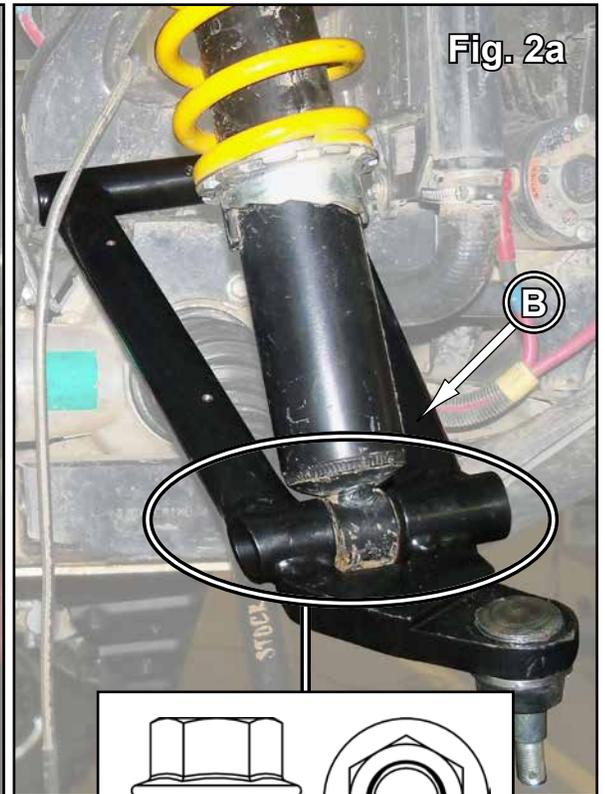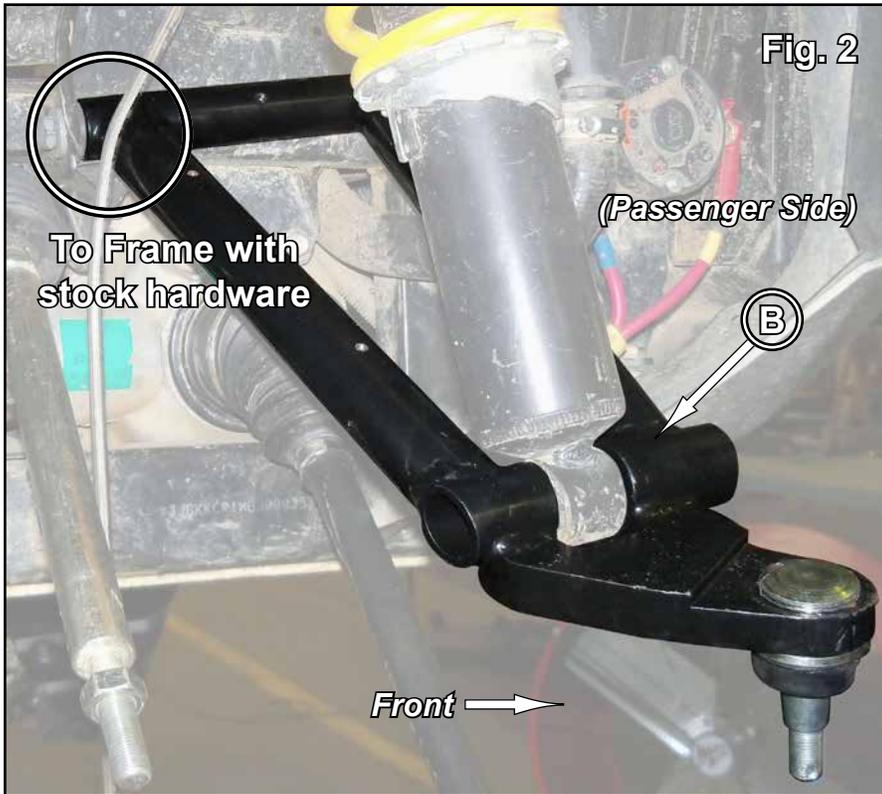

PARTS REFERENCE

Item	Description
A	Upper A-Arm, Driver
B	Upper A-Arm, Passenger
C	Lower A-Arm, Passenger
D	Lower A-Arm, Driver
E	Zerk Fittings
F	M5-.80 x 13mm Lg. PHMS
G	M10-1.5 x 70mm Lg. FHCS
H	M10-1.5 Nylock Nuts, Flange

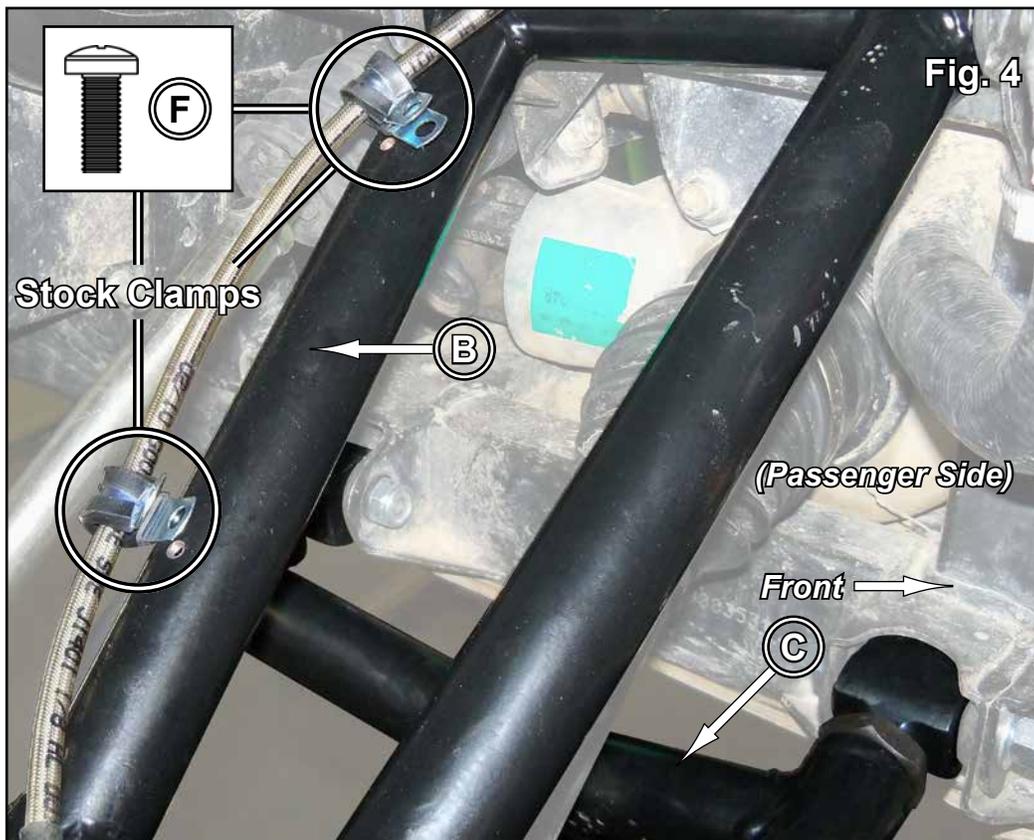

PARTS REFERENCE

Item	Description
A	Upper A-Arm, Driver
B	Upper A-Arm, Passenger
C	Lower A-Arm, Passenger
D	Lower A-Arm, Driver
E	Zerk Fittings
F	M5-.80 x 13mm Lg. PHMS
G	M10-1.5 x 70mm Lg. FHCS
H	M10-1.5 Nylock Nuts, Flange