


This product is designed, and manufactured, to gain additional ground clearance on utility vehicles and to be used at slower speeds on level terrains. Installation of this product increases angle of Axles which may result in frequency of required maintenance and part wear. It is recommended that wider Tires, or Wheel Spacers, be used in conjunction with this kit to improve stability.

| Item | Description | Qty |
|------|-------------------------|-----|
| A | Rear Brackets, Outside | 2 |
| B | Rear Brackets, Inside | 2 |
| C | Front Brackets | 4 |
| D | M10-1.5 Nylock Nuts | 8 |
| E | M10 Flat Washers | 19 |
| F | M10-1.5 x 50mm Lg. HHCS | 8 |
| G | Spacers | 4 |

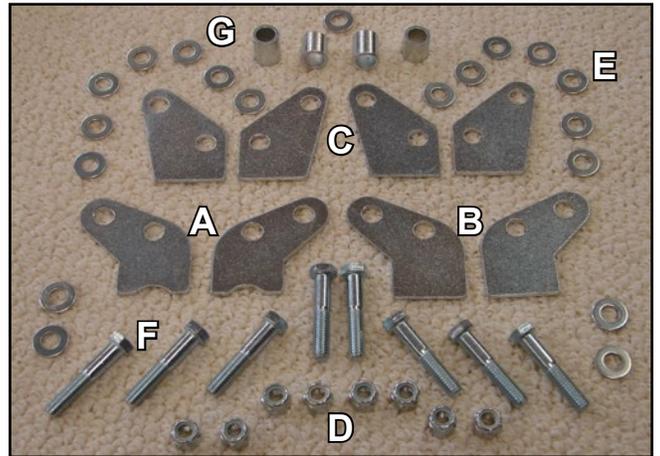

1. Raise front of machine, secure on jack stands, and remove Wheels.
2. Unbolt Shocks from Upper Mount and pull away from Frame.
3. Install Front Brackets (C), to Frame, with M10-1.5 x 50mm Lg. HHCS (F), M10 Flat Washers (E), Spacers (G), and M10-1.5 Nylock Nuts (D). See Fig. 1.
4. Reinstall shocks, into Front Brackets (C), with M10-1.5 x 50mm Lg. HHCS (F), M10 Flat Washers (E), and M10-1.5 Nylock Nuts (D). See Fig. 1. Tighten all hardware completely and reinstall Wheels.
5. Raise rear of machine, secure on jack stands, and remove Wheels.
6. Unbolt Shocks from Upper Mount and pull away from Frame.
7. Install Rear Brackets (A)(B), to Frame, with M10-1.5 x 50mm Lg. HHCS (F), M10 Flat Washers (E), Spacers (G), and M10-1.5 Nylock Nuts (D); **Note that Rear Brackets, Outside (A) are notched and go to outside of existing Shock Mounts.** See Fig. 2.
8. Reinstall shocks, into Rear Brackets (A)(B), with M10-1.5 x 50mm Lg. HHCS (F), M10 Flat Washers (E), and M10-1.5 Nylock Nuts (D). See Fig. 2. Tighten all hardware completely and reinstall Wheels.

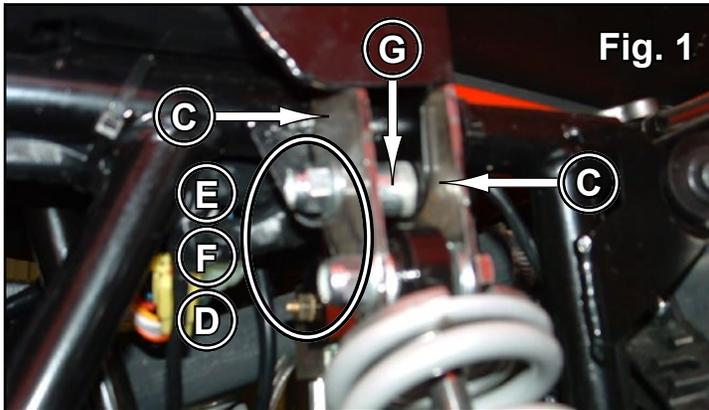


Fig. 1

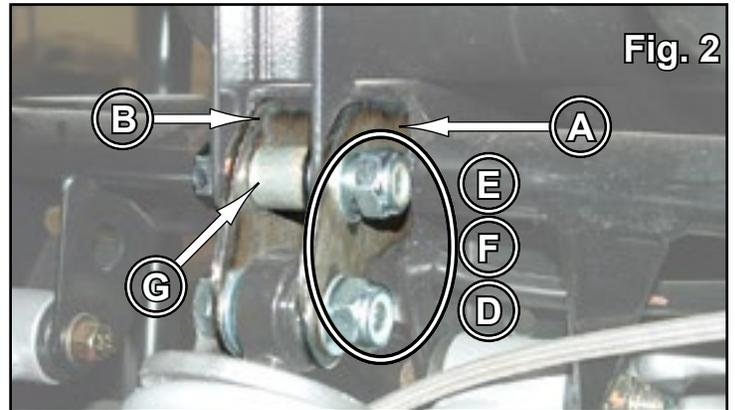


Fig. 2

Read instructions and view illustrations before beginning.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Thank You
For Choosing

SUPERATV.COM

Liability Statement

SuperATV's products are designed to best fit users ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory, or aftermarket, parts will void any warranty provided by SuperATV and is not recommended. SuperATV's products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV to verify that they will work together.

Although SuperATV has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV products, user agrees that should damages occur, SuperATV will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV will warranty only parts provided by SuperATV. Any damage or problems with OEM housings, bearings, seals, or other manufacturers products will not be covered by SuperATV. SuperATV parts and products are not warranted if item was not installed properly, misused, or modified.